


## 1. Product connection

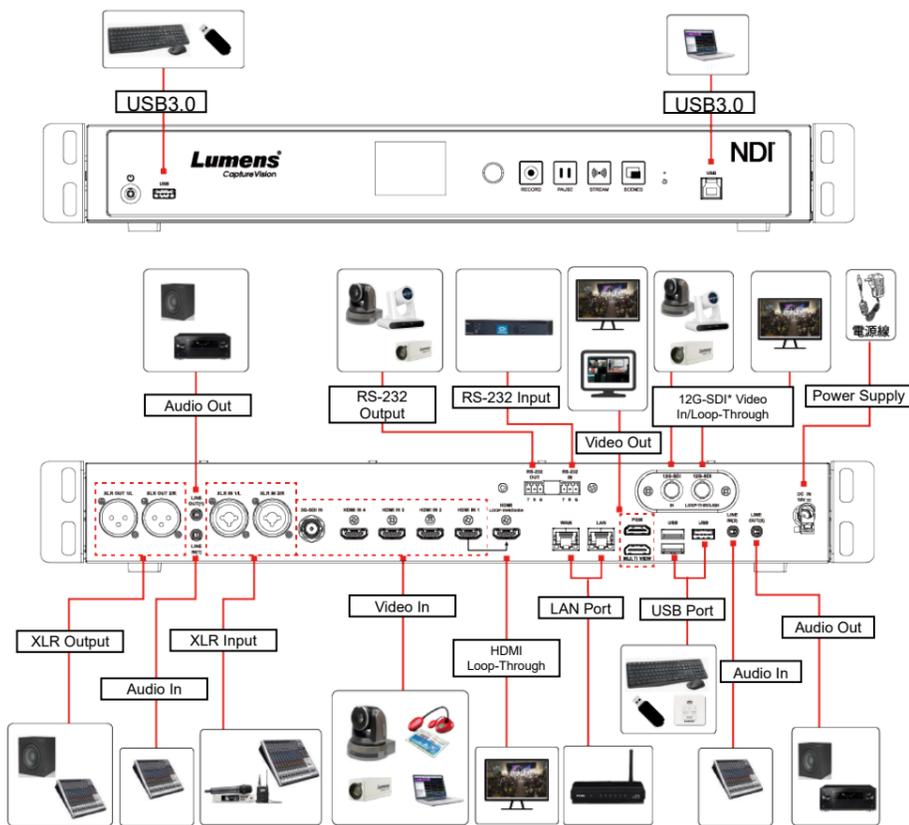

\*12G-SDI is only applicable to LC300S

## 2. Real-time operation menu

- Connect the HDMI MultiView output to the display panel to show the real-time operation menu (the default output is director screen, click HOME return to the menu)
- Connect the keyboard/mouse through the USB port and use the keyboard/mouse to select the menu settings



Items	Name	Function Descriptions
1	System Settings	Perform the system network setting, recording/streaming encoded setting
2	Director Management	Input signal selection, audio source management, recording/streaming control, output version selection, and network video camera control
3	File Management	Conduct the video file content management, including the following functions: upload, download, delete, replay video files
4	About	Display the current firmware version and relevant production information of device
5	Device IP	When connecting to the router, the current assigned device IP address will be displayed

## 3. Webpage management

### 3.1 Confirm the IP address of the device

Connect the WAN to the router and get the IP address of the device in the HDMI MultiView output screen.

### 3.2 Input the device's IP address into a web browser to access the webpage management login interface.

192.168.100.100

### 3.3 Enter the account/password to log in



- Account: admin
- Password: admin

## 4. Search and add video sources

### 4.1 System Settings (Configuration) > Video Source

Support HDMI/ SDI/ USB/ IP signal source settings

\*12G-SDI is only applicable to LC300S



### 4.1.1 Physical Video Source Manager

Click **[Edit]** to edit the HDMI signal source name and resolution  
\*LC300S supports 12G-SDI signal sources and can switch signal sources on the Video Input1 edit page

ID	Source Name	Source Configuration	Visca Address	Protocol	Edit
1	VC-TR40	12G SDI	N/A	VISCA_OVER_IP	[Edit]
2	Video Input 2	HDMI 2	N/A	N/A	[Edit]
3	Video Input 3	HDMI 3	N/A	N/A	[Edit]
4	Video Input 4	HDMI 4	N/A	N/A	[Edit]

### 4.1.2 USB Video Source

Click **[+Add]**, select the USB signal source device and apply to add.

ID	Source Name	Source Configuration	Delete
1	VC-TR60	Lumens VC-TR60 Camera: Lumens V	[Delete]

### 4.1.3 Network Source Manager

Support automatic search for network cameras within the local area network or manually add RTSP/SRT streams

#### • Network Source

- Click **[Refresh]** to search for network cameras within the local area network
- Select Camera, click **[Login]**
- Enter username/account, click **[Authentication]**
- Certification complete, status displayed as **[OK]**

Host Name	IP Address	MAC	Manufacturer	Status	Connected	Delete
VC-A71P-HN	192.168.4.56	DC:E2:AC:02:B4:...		Login	OK	[Delete]
VC-TR40	192.168.4.90	DC:E2:AC:02:E1:...		Login	OK	[Delete]
VC-TR40	192.168.4.44	DC:E2:AC:02:E0:...	Lumens	OK	OK	[Delete]

#### • Network Stream


Click **[Add]**, enter the streaming information, manually add RTSP/SRT streams

Device Name	URL	Edit	Delete
VC-A51P	rtsp://192.168.4.69:8557/h264	[Edit]	[Delete]

## 4.2 Video Channel Manager


### 4.2.1 Click on **[Edit]**

4.2.2 The online video sources will be displayed in a list, please drag the source to the desired channel

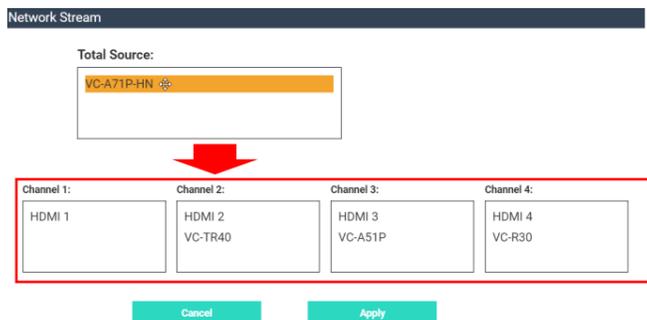

### 4.3 Go to the director's management page and set up the channel signal source

- Click **[Video]**, select the channel video source
- Click **[▶]** to preview the screen of each channel signal source
- PVM: Click **[▶]** to output the preview screen
- PGM: Click **[▶]** to output the director's screen
- If you want to switch scenes, click **[CUT]** to switch to the director's screen

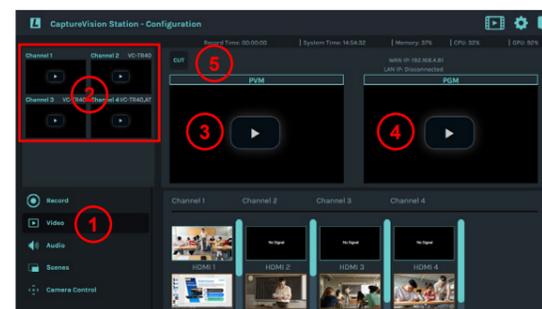

## 5. Director Management

Follow these steps to access the Director Management Interface

- HDMI MultiView output
- Log in to the web page by entering the online Director's Account / Password (default setting: director/director)

**Switch Button**  
Switch the PVM screen to the PGM screen

**Video Source Selection (Video)**  
Select video signal, HDMI signal, network camera, streaming, or USB signal source screen

**Audio Source Management (Audio)**  
Manage the input and output audio sources; adjust the audio recording volume

**Layout Setting (Scenes)**  
Fast select the required production layout, or customize the background and scene style

**Camera Control**  
Provide video camera/ PTZ control

**Status Display**  
Displays current recording status, hard disk capacity and Internet connection status, etc.

**PVM/ PGM**  
Displays the preview and actual output screen

※For questions about the installation, please scan the QR Code. A support person will be assigned to assist you.

