Lumens


Lumens®

Shure MXCW & CamConnect Pro Settings Guide

Get IP address

- 1. Connect the MXCW Access Point Transceiver to a PoE power source.
- 2. Note the IP address on the LCD of the MXCW APT.

Please note that if you are logging in for the first time, you will need to set the passphrase.

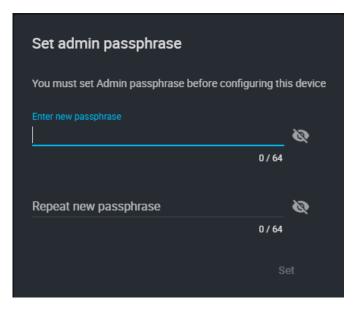


Type the IP address into the browser, to log in. Enter the passphrase.


MXCW APT	
Microflex Complete Wireless Access Point	
Sign in as	
Admin	
Passphrase	18
Sign in	
Language English (US)	•



Seats configuration

- 1. MXCW ATP will list available microphones.
- 2. Configure each seat role.
- 3. Select one of 6 participant roles.

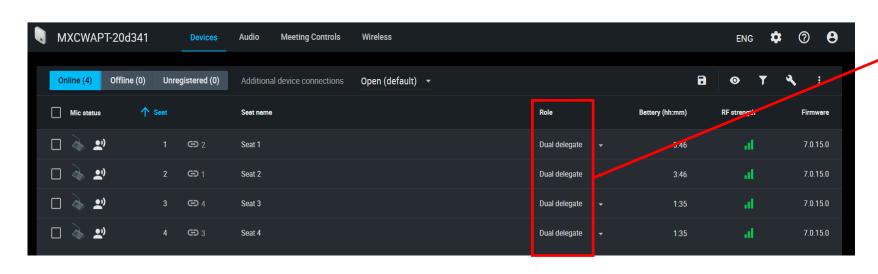

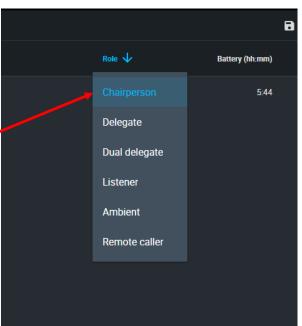



Seats configuration

1. The selected roles affect the behavior of the connected cameras.

Role	Brief description
Chairperson	Moderator or leader of the event
Delegate	Typical participant
Listener	No microphone required
Ambient	Improves audio mix
Remote Caller	Delegates can remotely participate in events
Dual Delegate	Two delegates share one conference unit



Role setting & camera behavior

If many people are talking simultaneously, the camera will prioritize the chairperson. The camera will only switch to another speaker after the chairperson finishes talking.







Role setting & camera behavior

If both microphone users are chairpersons, the camera will be triggered by the last speaker.










Role setting & camera behavior


If several people are talking at the same time, the last one to talk will be prioritized.

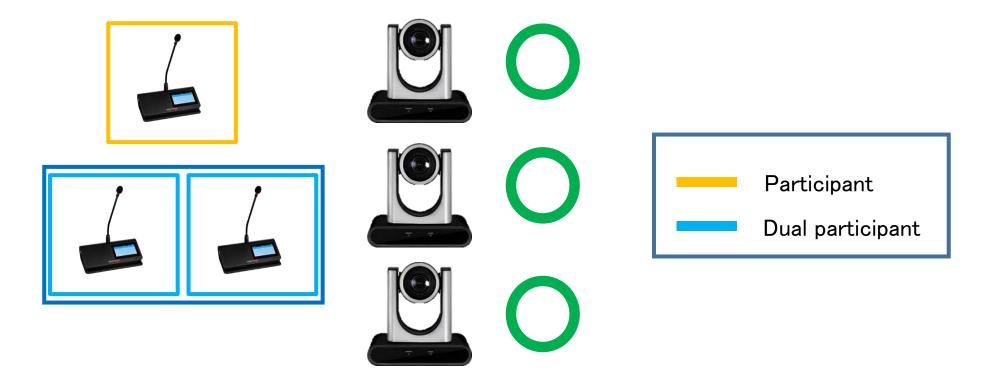



Update CamConnect Pro's firmware


- Click to ensure your CamConnect Pro has the latest firmware.
- X Shure MXCW is compatible with CamConnect Pro v1.5.6 or later.

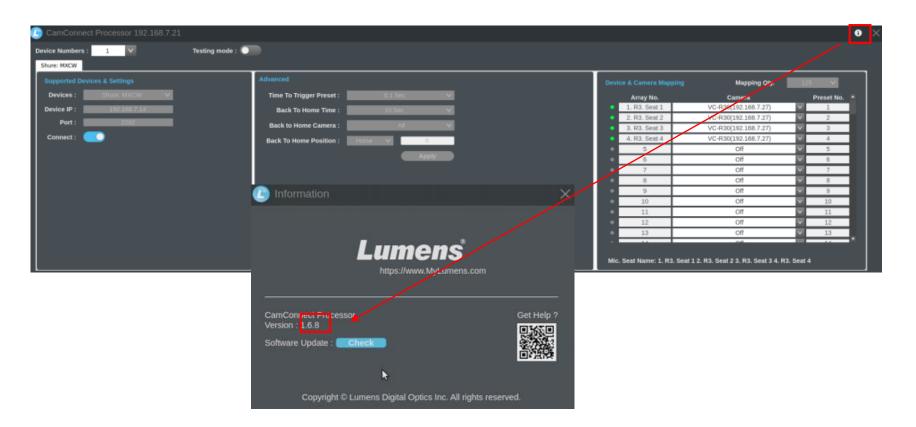



Link CamConnect Pro with Shure MXCW

- 1. Enter MXCW's IP address. Press the [Connect].
- 2. Connect to the specific camera you require.
- 3. Connect each seat to the desired camera.
- *Please note that MXCW can control up to 125 microphones.

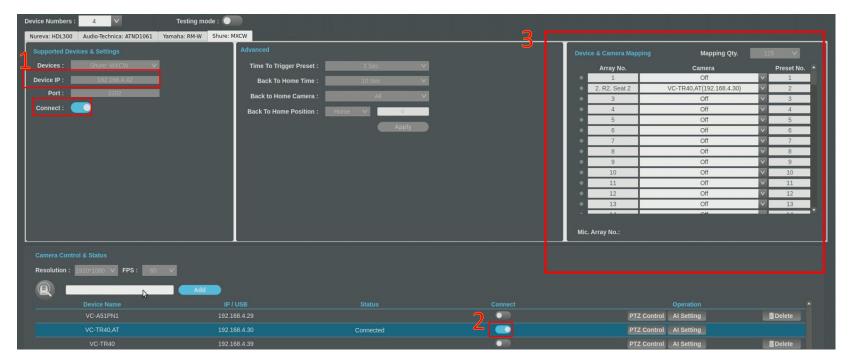



Channel description

Each 'R' number represents a different role, and the roles shown here correspond with the configuration on the webpage

R0: Offline


R1: Chairperson


R2: Typical participant

R3: Dual Delegate

R4: Listener

R5: Remote Caller

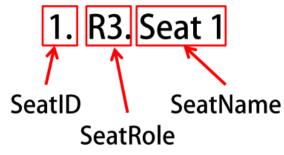

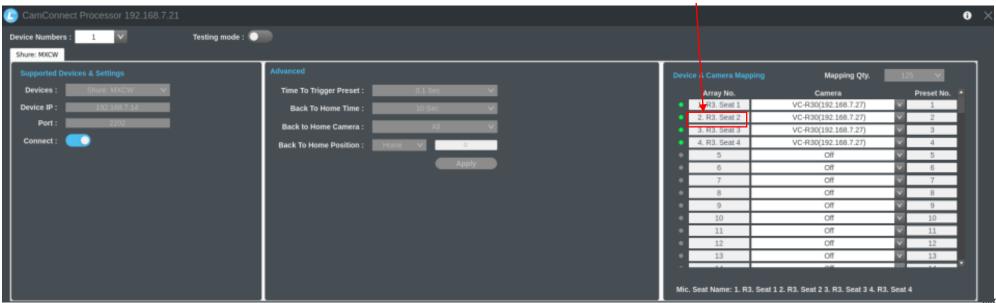





Thank You!















