

# VC-A50P Camera Upgrade Installation Guide

Quick Installation Guide	2
Complete Installation Guide	3



# **Quick Installation Guide**

Please read all instructions prior to attempting your NDI<sup>®</sup> |HX camera upgrade. Be advised that a current Microsoft Windows<sup>®</sup> computer or device is required to complete the upgrade process.

Thank you for purchasing the NDI<sup>®</sup>|HX upgrade for your camera.

This installation guide will walk you through the steps to make your camera immediately available as an NDI<sup>®</sup> source for all compatible systems, devices, and software on your network.

#### **Three Easy Steps**



## Step 1

Download & install the NDI<sup>®</sup> |HX driver

http://new.tk/NDITools

Note: NDI|HX driver is part of NDI Tools, a free suite of applications designed to introduce you to the world of IP. Learn More at <u>https://www.newtek.com/ndi/tools/</u>

## Step 2

#### Download camera firmware & update

- Ensure that both your Windows<sup>®</sup> computer or device and camera are connected to the same local network via standard Ethernet cable.
- From your computer or device, open NewTek NDI<sup>®</sup> Studio Monitor (installed with your NDI<sup>®</sup>|HX driver) and select your camera model from the upper-left menu. Then click "Upgrade" in the bottom-right corner.
- From the dialog box, select "Download latest firmware" and then "Update firmware on Camera" when download is complete.

## Step 3

#### Enter your NDI<sup>®</sup>|HX license key & click "Enable NDI<sup>®</sup>|HX"

Note: NDI®|HX license key is available for purchase on store.newtek.com



# Complete Installation Guide-Windows

#### Download & install the NDI® HX driver

- Follow this link to download your NDI<sup>®</sup>|HX driver from the NewTek website. http://new.tk/NDITools
- Install the driver on your Windows<sup>®</sup> device.
  Note: This will also install NewTek NDI<sup>®</sup> Studio Monitor

### Update Your Camera Firmware & Upgrade to NDI®|HX

• With the NDI<sup>®</sup>|HX driver installed on your Windows<sup>®</sup> device, ensure that both your Windows<sup>®</sup> device and camera are powered and connected to the same local network via standard Ethernet cable.

If you are using a switch (without a router), you may need to manually configure the network settings on your Windows<sup>®</sup> computer or device.

- From your Windows<sup>®</sup> computer or device, open the NewTek NDI<sup>®</sup> Studio Monitor application (installed with your NDI<sup>®</sup>|HX driver) to finish the process.
- Click the menu icon in the upper-left corner to view all the available NDI<sup>®</sup> sources, then locate and select your camera.



IMPORTANT: Your camera must be connected to the same local network as the Windows<sup>®</sup> computer or device with your NDI<sup>®</sup>|HX driver installed to proceed.



• With your camera selected, click on the UPGRADE button in the bottom-right corner of the NewTek NDI<sup>®</sup> Studio Monitor window.



• After the dialog box opens, click on the **1a.** button to download the latest firmware for your camera. You will be redirected to the camera manufacturer's website. Locate the proper firmware for your camera and download it, along with any instructions for the firmware update.

NewTek NDI - Camara 6 (Chann	el 13		0
1444 M			
	📓 NewTek NDI   HX		$\times$
	1. Upgrade your camera firmware		$\sim$
	1a. Download the latest firmware	1b. Update firmware on camera	
	2. Purchase NDI   HX License		
	Visit Store.NewTek.com to purch	ase an NDI   HX License for this camera	
	- 3. Enter NDI   HX License serial number		-
4	- 4. Enable NDI   HX on this camera		
	Enab	e NDI   HX	
		Clos	•
			UPGRAD



• With the firmware downloaded on your computer, click on the **1b.** button. This will take you to the camera's web control page where you can finish the firmware update process following the instructions from the camera manufacturer.

NDI - Camara 6 (Channal	el 1)	0
	NewTek NDI   HX	× 🗸
	1. Upgrade your camera firmware	$\sim$
	1a. Download the latest firmware 1b. Update firmware on camera	
	2. Purchase NDI   HX License	
	Visit Store.NewTek.com to purchase an NDI   HX License for this camera	
	- 4. Enable NDI   HX on this camera	
	Enable ND1   HX	
		se
		LUPGH

If you have already purchased a NDI<sup>®</sup>|HX license for your camera please skip the following step.

• Once the firmware has been updated, click on the **2.** button to purchase an NDI<sup>®</sup>|HX license for your camera. You will be redirected to the NewTek Store to complete the purchase. Once the transaction is complete, you will receive a confirmation email with the NDI<sup>®</sup>|HX **license key** within a few minutes.

lewTek NDI - Camara 6 (Chan	al 1)	0
	NewTek NDI   HX	× ×
	1. Upgrade your camera firmware	$\sim$
	1a. Download the latest firmware	1b. Update firmware on camera
	2. Purchase NDI   HX License	
	Visit Store.NewTek.com to purchase an NDI   HX License	e for this camera
	-3. Enter NDI   HX License serial number	
	4. Enable NDI   HX on this camera	
	Enable NDI   HX	
		Close
		CURSHA

IMPORTANT: Please have the order confirmation email available or otherwise copy the license key number for reference before you proceed.



• Enter the **license key** for your camera that was included with the confirmation email in the number **3.** text box.

NewTek NDI - Camara 6 (Channal 1	0	×
	🐱 NewTek NDI   HX	× 🗸
	- 1. Upgrade your camera firmware	$\sim$
	1a. Download the latest firmware 1b. Update firmware on camera	
	2. Purchase NDI   HX License	
	Visit Store.NewTek.com to purchase an NDI   HX License for this camera	
	3. Enter NDI   HX License serial number	
	ABC123DEF456GHI789	
	4. Enable NDI   HX on this camera	
	Enable NDI   HX	
		lose
		UPGRADE

• Click on the 4. button to enable NDI®|HX on your camera.

	S NewTek NDI   HX	× >								
	1. Upgrade your camera firmware	X								
	1a. Download the latest firmware	b. Update firmware on camera								
	2. Purchase NDI   HX License									
	Visit Store.NewTek.com to purchase an NDI   HX License	for this camera								
	- 3. Enter NDT   HX License serial number									
	ABC123DEF456GHI789									
-	4. Enable NDI   HX on this camera									
	Enable NDI   HX									
		Cose								



• Configure and control your camera using the on-screen user interface.



Once registered, you can use your camera over the network with any other NDI<sup>®</sup>compatible system, device, or software, performing the standard functions for locating an NDI<sup>®</sup> source and designating for video input.

If you have additional cameras to upgrade, please repeat the steps in this installation guide as required to enable NDI<sup>®</sup>|HX. A separate NDI<sup>®</sup>|HX license key is required for each camera.



# Complete Installation Guide-OS X

#### Download & install the NDI<sup>®</sup>|HX driver

 Follow this link to download your NDI<sup>®</sup>|HX driver from the NewTek website. http://new.tk/NDIHX-Driver-OSX

• Install the driver on your OS X device.

#### Update Your Camera Firmware & Upgrade to NDI<sup>®</sup>|HX

 With the NDI<sup>®</sup>|HX driver installed on your OS X device, ensure that both your OS X device and camera are powered and connected to the same local network via standard Ethernet cable.

If you are using a switch (without a router), you may need to manually configure the network settings on your OS X computer or device.

 From your OS X computer or device, open the NewTek NDI<sup>®</sup> Video Monitor application (install link for NDI Video Monitor http://new.tk/NDIHX-Driver-OSX) to finish the process.





to learn how to activate this device.



Ś.	NewTek NDI Video Monitor	File	Settings	View	Window	Support				
000					PTZOpticsC	amera (Ch	annel 1)			
					Re	egister				
			1. Upgrade F	irmware						
			14	a. Downl	oad		1b. Update			
			2. Purchase	License ;				_		
			V	isit Stor	e.NewTek.c	om to purca	ahse a license			
			3. Enter Key	2						
			4. Enable NC	01						
					E	nable				
	to	e						Close	evice.	

- After the dialog box opens, click on the **1a.** button to download the latest firmware for your camera. You will be redirected to the camera manufacturer's website. Locate the proper firmware for your camera and download it, along with any instructions for the firmware update.
- With the firmware downloaded on your computer, click on the **1b**. button. This will take you to the camera's web control page where you can finish the firmware update process following the instructions from the camera manufacturer.
- Once the firmware has been updated, click on the 2. button to purchase an NDI<sup>®</sup>|HX license for your camera. You will be redirected to the NewTek Store to complete the purchase. Once the transaction is complete, you will receive a confirmation email with the NDI<sup>®</sup>|HX license key within a few minutes.
- Enter the license key for your camera that was included with the confirmation email in the number 3. text box.
- Click on the 4. button to enable NDI®|HX on your camera.
- Once registered, you can use your camera over the network with any other NDI®-compatible system, device, or software, performing the standard functions for locating an NDI® source and designating for video input.
- If you have additional cameras to upgrade, please repeat the steps in this installation guide as required to enable NDI®|HX. A separate NDI®|HX license key is required for each camera.

Lumens is the registered trademark of Lumens Digital Optics Inc. Changes in specification or design may be done without notification.