YAMAHA RM-CR Lumens Settings Guide

Download RMDeviceFinder

Download Link:

https://info.uc.yamaha.com/rm-device-finder

***YAMAHA**

Windows 10 (32bit/64bit) / Windows 11

Compatible Models

- RM-CG
- RM-CR(*1)
- RM-TT
- RM-WAP-8
- *1) rear port only

Important Notice

If the [ETHERNET SWITCH SETTINGS] is set to [Separated] mode (default) and you want to set an RM-CR Dante terminal and corporate terminal to the
same IP segment, connect both terminals to the same network switch. If you connect them to different network switches, "RM Device Finder" and
"ProVisionaire Control" will not be able to detect the device.

Main Revisions and Enhancements

New Functions

- The RM-TT and RM-WAP-8 can now be detected and the Web GUI can be displayed.
- Added a firmware update function (compatible with the RM-CR, RM-CG, RM-TT, and VXL1-16P).


Licensing Agreement & Download

■I agree to the licensing terms outlined below.*





Find Device IP using RMDeviceFinder

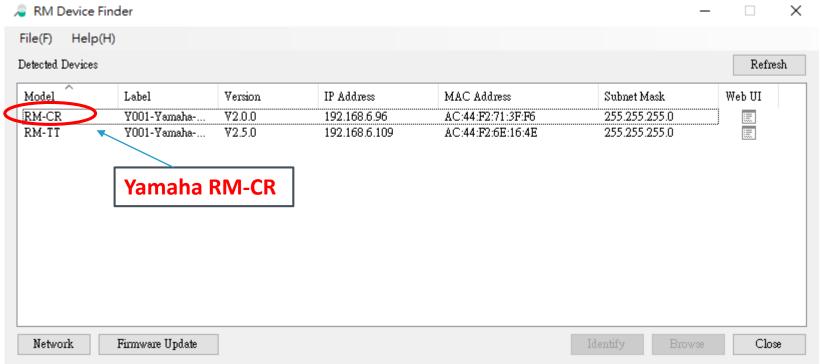

Yamaha RM-CR Signal Processor Settings



Set up Yamaha devices

RM-CR



■ Use a PoE switch to power RM-CR and RM-TT.


RM-TT








Login in to the Yamaha RM-CR Webpage

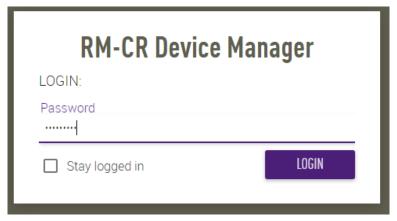

- Enter RM-CR IP address into a web browser.
- Type the password into the login window, and then click the [LOGIN] button.



Connect RM-TT with RM-CR

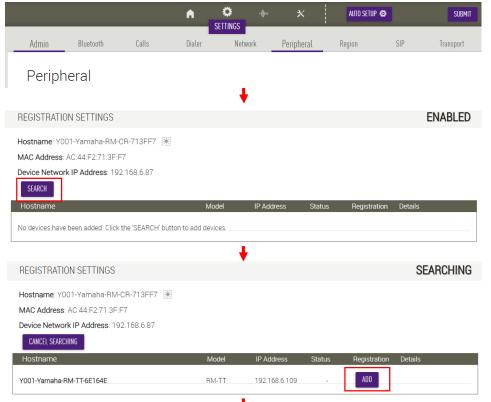


Step 1: Go to "Settings" and then the "Peripheral" tab.

Step 2: Press "SEARCH" to find Yamaha devices on the same subnetwork.

■ Step 3: After finding the device, press "ADD" to connect device with RM-CR



Connect RM-TT with RM-CR

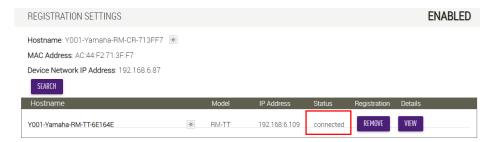


- Step 4: When the Yamaha device is connected to the RM-CR, it will show status "connected".
- Now, move to CamConnect Pro to link the microphone to your Lumens cameras.




Your Reliable Partner

Microphone Status

- Go to the "Audio" "Input" tab
- Dante Receive Channel No. corresponds to CamConnect Pro. Array No.

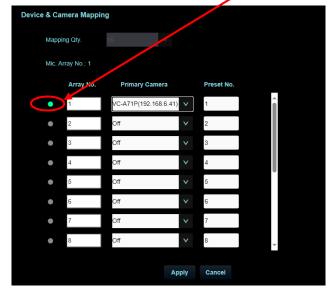

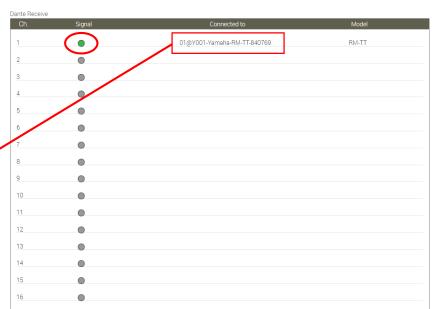




CamConnect Pro Settings



- Support Device & Settings (AI-Box1 FW 1.7.18 or later version)
- 1. Pull down the Device item and select [Yamaha RM-CR]
- 2. Enter the IP address of Yamaha RM-CR
- 3. Set Audio Trigger Level to 50dB.
- 4. Slide the [Connect] button to connect with the Yamaha RM-CR

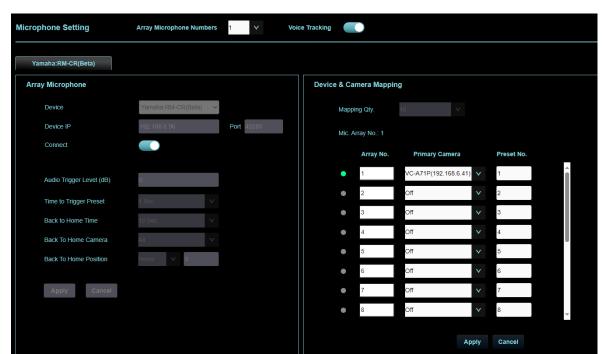





Thank You!















