DC190 Quick Start Guide

Lumens™

⚠ Important

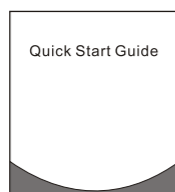✻ Please activate your warranty at **www.lumens.com.tw/reg**

✻ Please visit our website **www.lumens.com.tw/goto.htm** to download latest version of Software, Multilingual User Manual and Quick Start Guide.

1. Package Contents

DC190

Quick Start Guide

Quick Start Guide

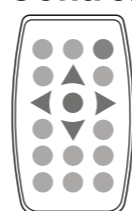✻ To download this manual in other languages, visit Lumens website
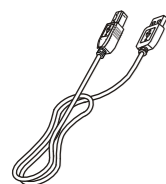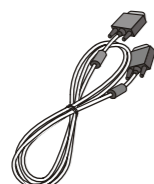
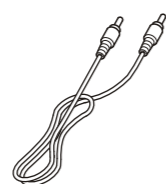**Download & Safety Instruction**

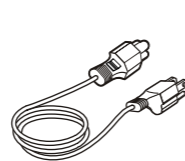**4-Step Card**

Remote Control
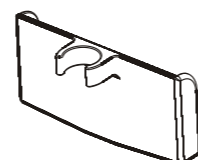
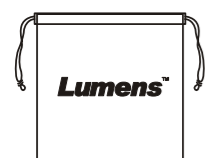**USB Cable**

VGA Cable

Audio Cable

Power Cord

✻ Appearance may vary in different countries

Remote Control Holder

Accessory Pouch

Lumens™

Pouch

Lumens™
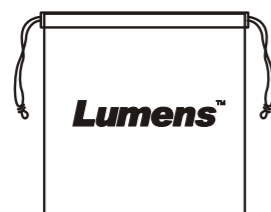
Microscope Adapter

⚠ The package contents are subject to change without notice.

2. Getting Started

③

FOCUS

④

A F

①

① Place an object to be displayed under the camera.

② Turn the power on. ⏻
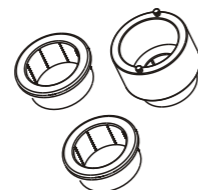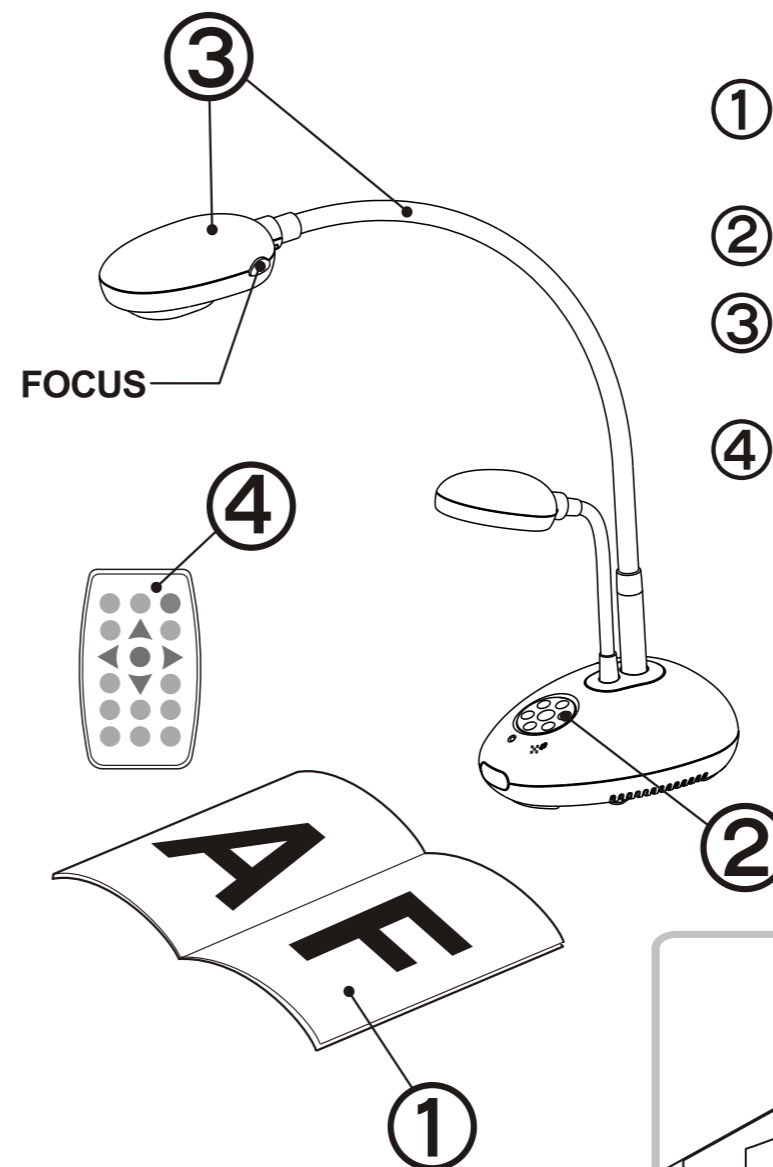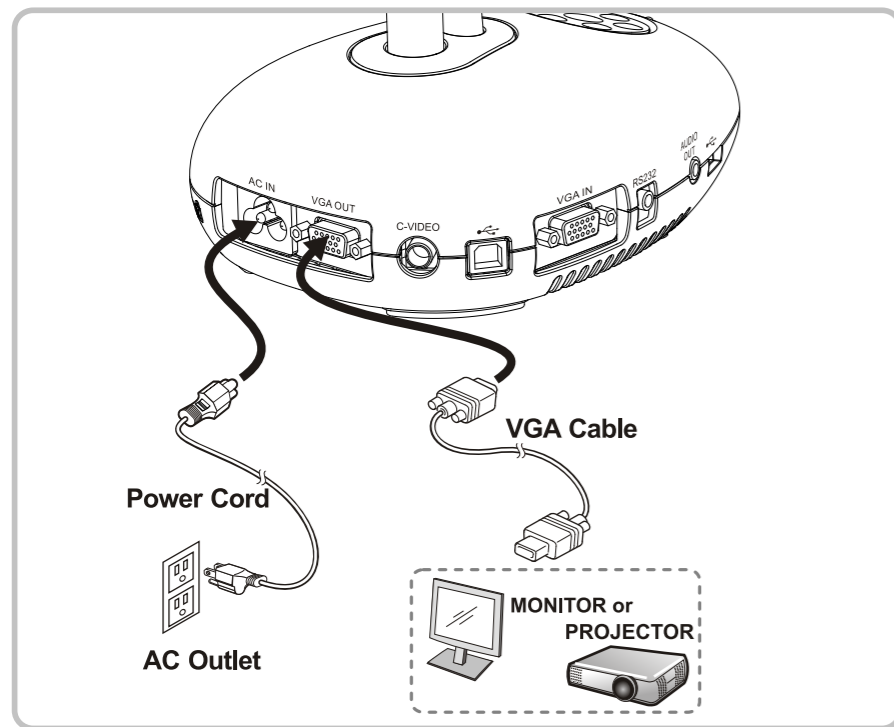
③ Adjust the gooseneck and lens to appropriate position.

④ Press the [AUTO TUNE] 🚗 button to optimize the image. You are ready to teach / present.

✻ Each time the camera head is moved, press the [FOCUS] button to refocus the lens.
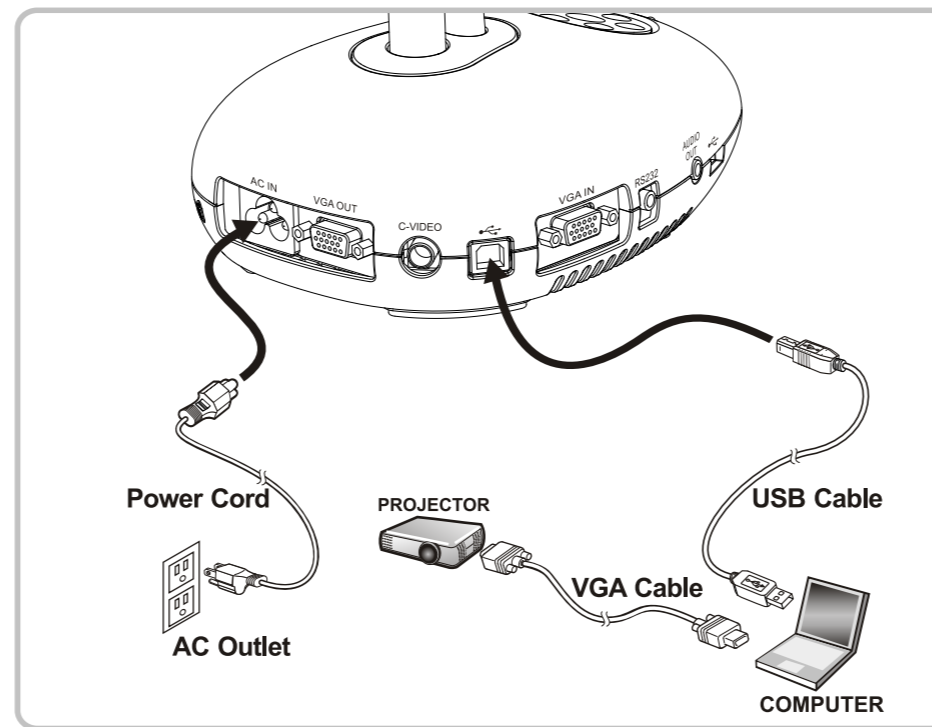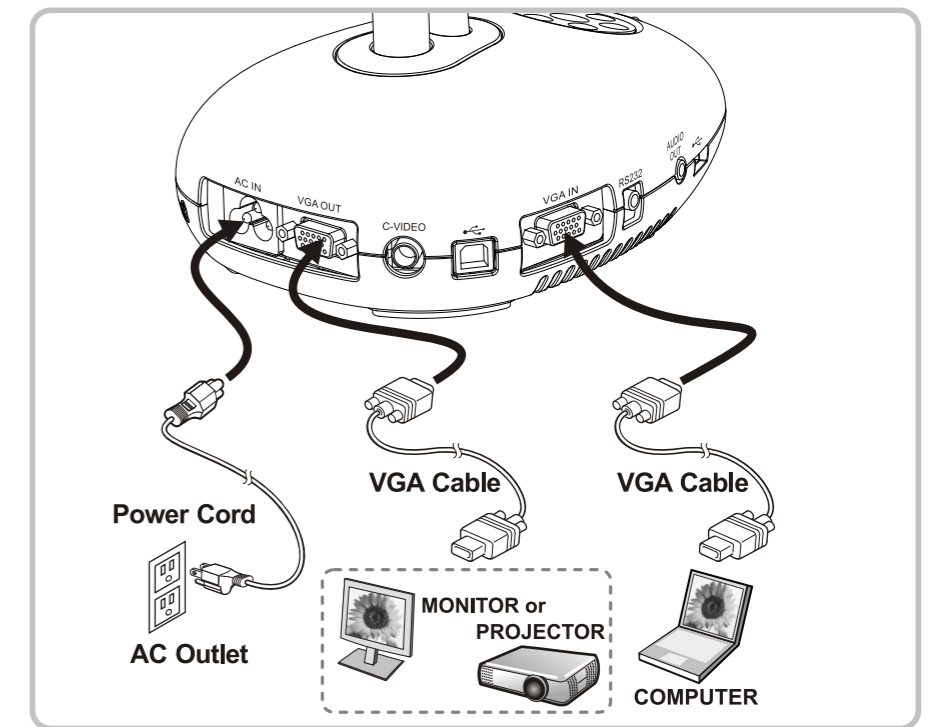
PROJECTOR

A F

DVD

PC
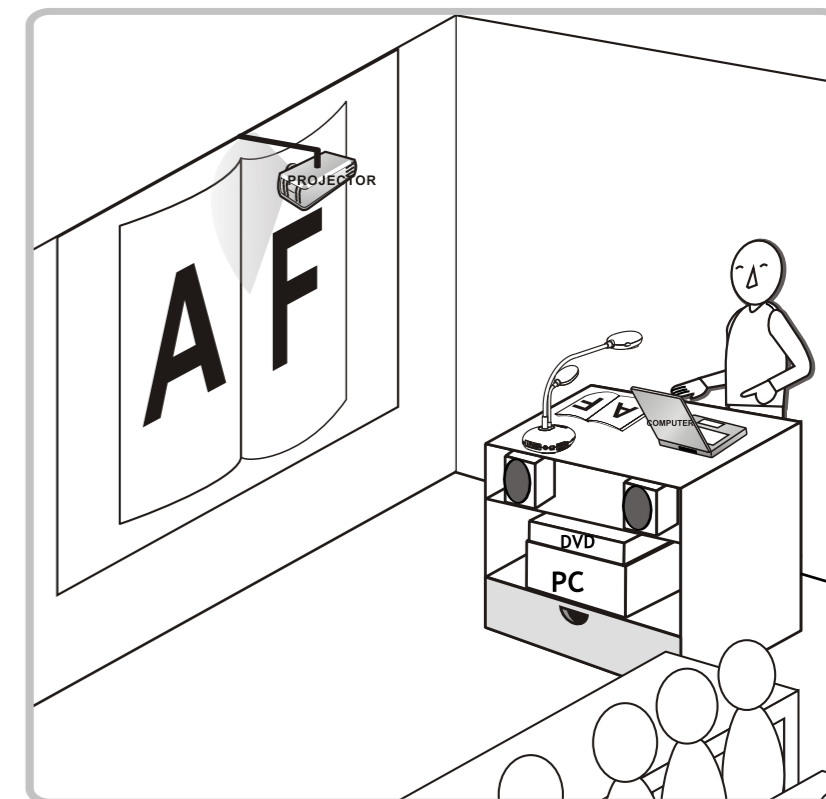
▼ Connect to a Projector or Monitor

VGA Cable
Power Cord
AC Outlet
MONITOR or PROJECTOR

▼ Connect to a Computer and Use Ladibug™ Software.

Power Cord
PROJECTOR
USB Cable
VGA Cable
AC Outlet
COMPUTER

✱ Driver and software can be downloaded from Lumens website.

▼ Connect a Computer, Projector or Monitor simultaneously

VGA Cable   VGA Cable
Power Cord
AC Outlet
MONITOR or PROJECTOR
COMPUTER

✱ Press [SOURCE] button to switch the image source.

▼ Connect to an Interactive Whiteboard (IWB)

Power Cord
IWB
PROJECTOR
USB Cable
VGA Cable
AC Outlet
USB Cable
COMPUTER

▼ Connect to a TV

Power Cord
C-Video Cable
DIP SWITCH
NTSC
PAL
AC Outlet
TV

✱ NTSC: USA, CANADA, MEXICO, PANAMA, CHILE, JAPAN, TAIWAN,
        KOREA AND PHILIPPINES.
✱ PAL: Country / region not listed above.
✱ To make DIP switch set up effectiveness, please re-plug the power cord and
  reboot the machine. Once C-Video is on, VGA is not supported.
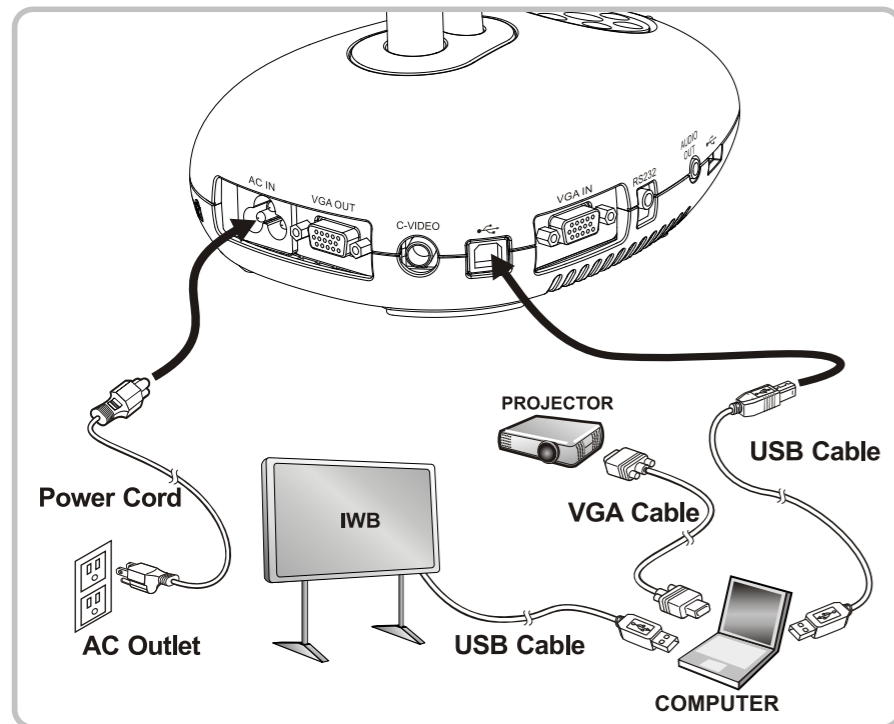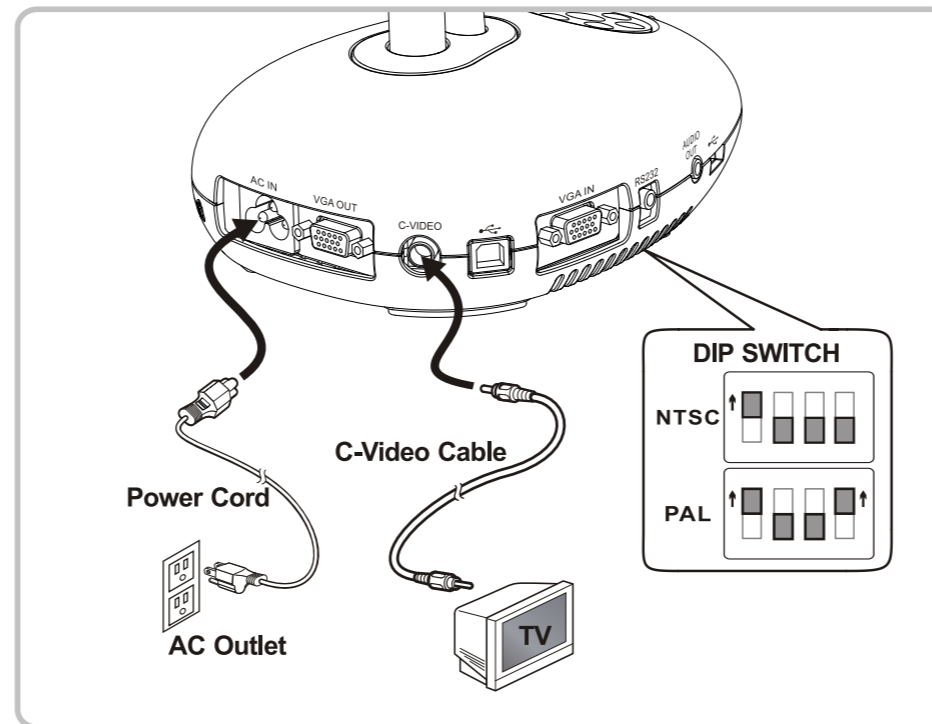
▼ Connect to a Computer and Flash Disk

FLASH Disk
Power Cord
USB Cable
AC Outlet
COMPUTER