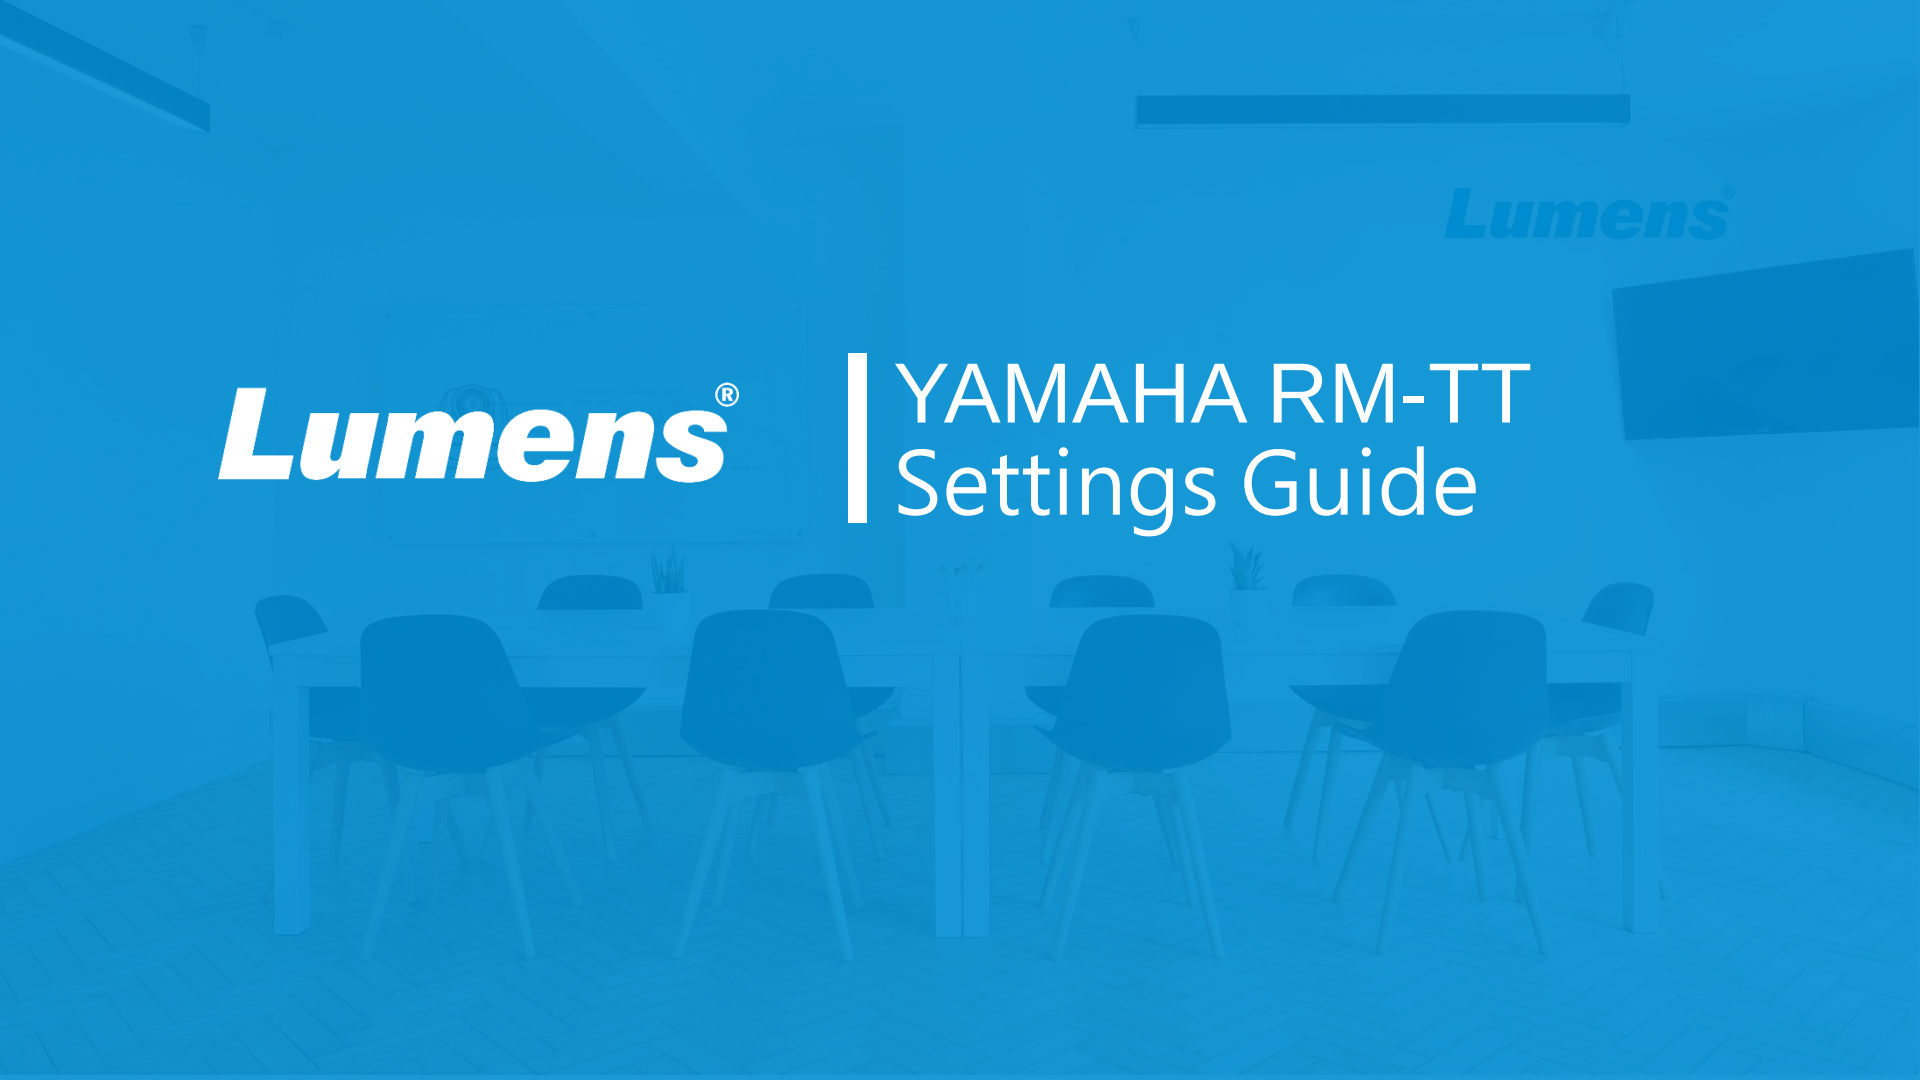
Lumens®
YAMAHA RM-TT
Settings Guide

Set up a Yamaha RM-TT array microphone

RM-TT

- Power the RM-TT using a PoE switch
- Locate RM-TT and CamConnect Pro on the same network

Lumens®
Copyright © Lumens. All rights reserved.

Download RMDeviceFinder

Download Link:
https://info.uc.yamaha.com/rm-device-finder

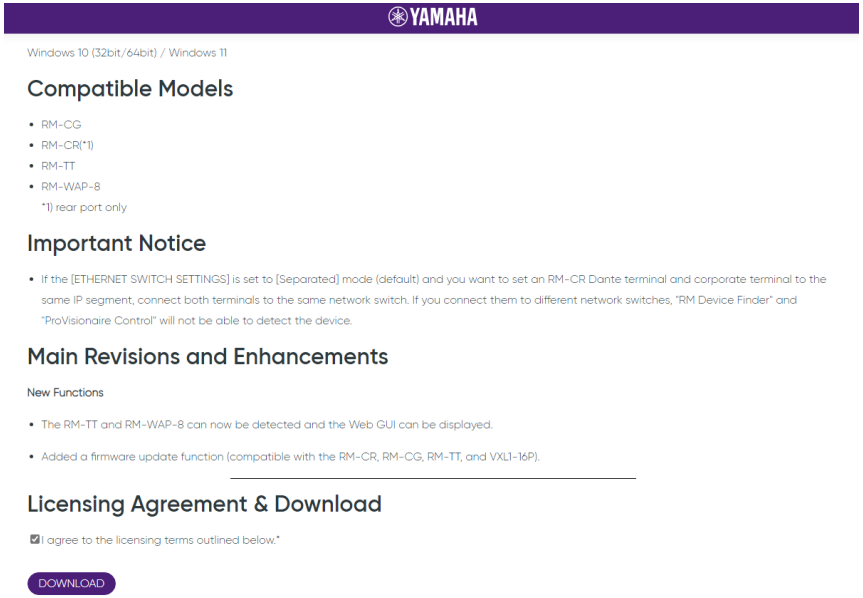

Lumens®
Copyright © Lumens. All rights reserved.

Find Device IP using RMDeviceFinder

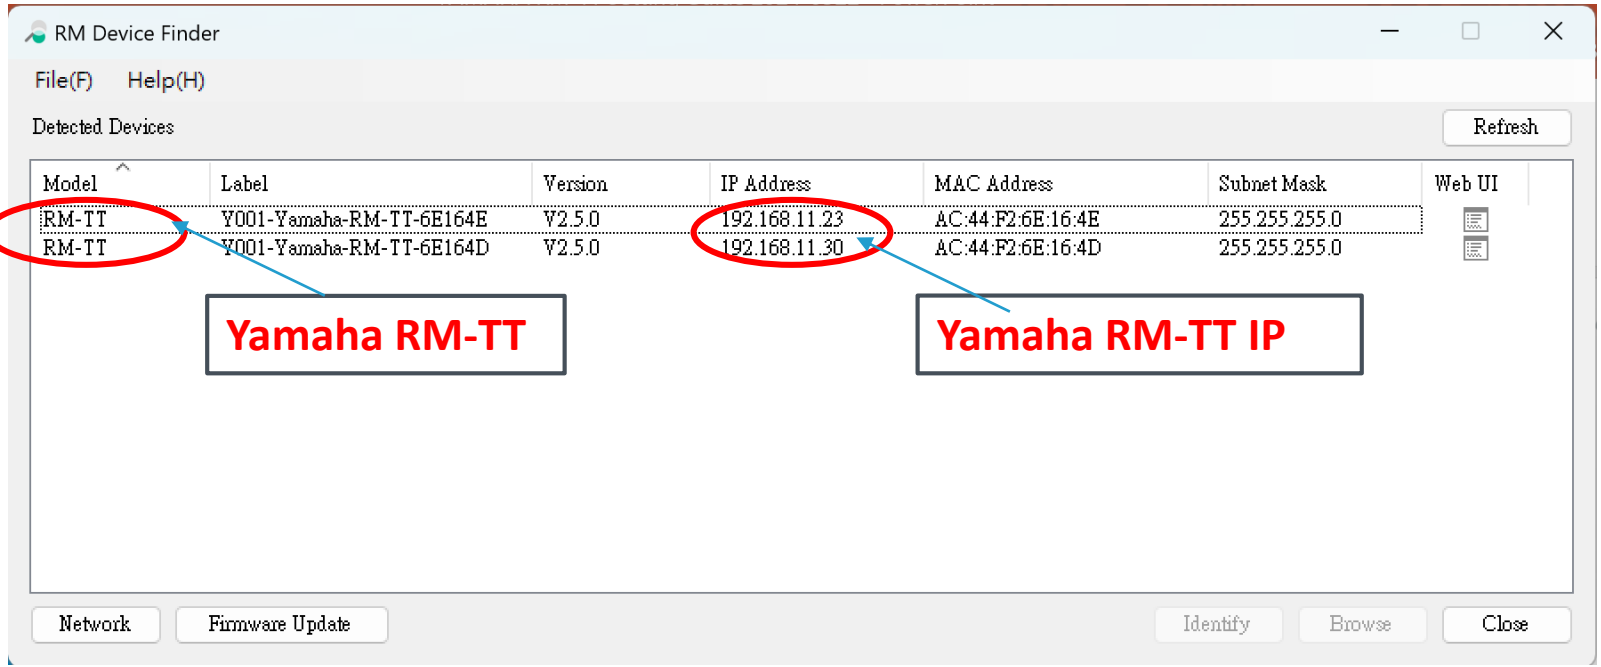

Lumens®
Copyright © Lumens. All rights reserved.

Login in Yamaha RM-TT Webpage

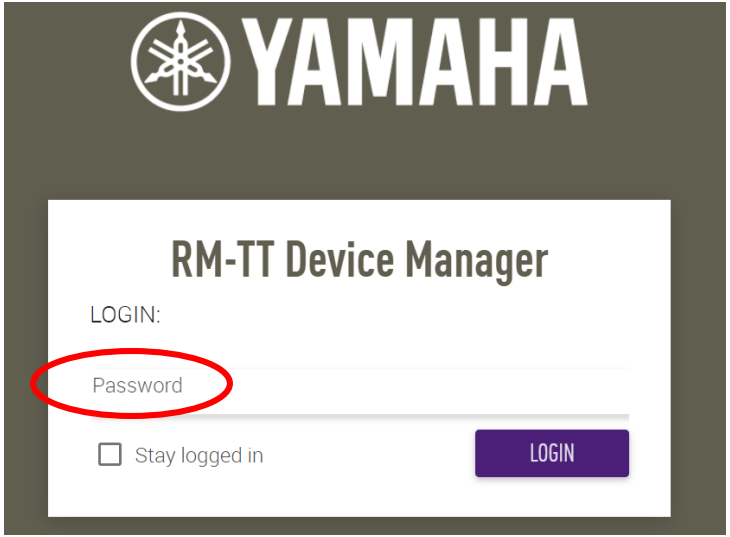

- Enter RM-TT IP address into a web browser.
- Type in the password, then click the [LOGIN] button.

Lumens®
Copyright © Lumens. All rights reserved.

Check the RM-TT connection

Home

View status of system

SYSTEM STATUS

Hostname:	Y001-Yamaha-RM-TT-6E164E
Model:	RM-TT
MAC Address:	AC:44:F2:6E:16:4E
IP Address:	192.168.11.23
Main version:	V2.5.0
Serial Number:	S7M001002

LED INDICATION STATUS

Status:	Green lit
Mic:	Green lit

■ Confirm the LED status

Lumens®
Copyright © Lumens. All rights reserved.

CamConnect Pro Settings

Lumens®

Copyright © Lumens. All rights reserved.

Microphone Status & Support Device & Settings

1. Go to Array Microphone Numbers, select the number of RM-TTs you are using.

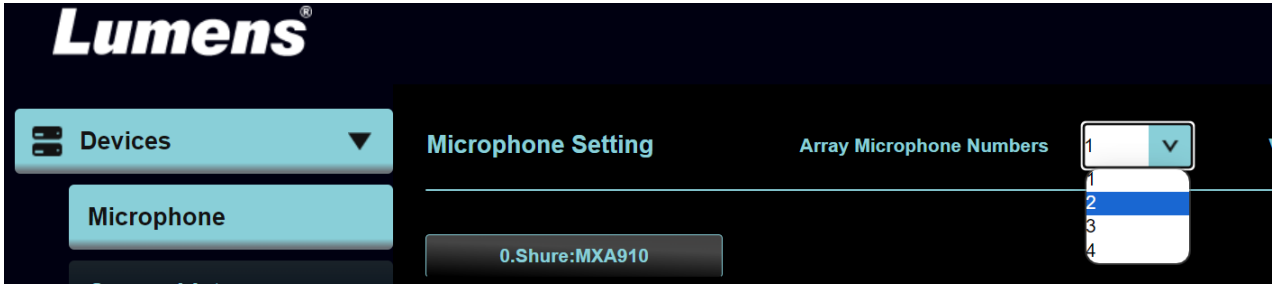

2. Pull down the Device item and select [Yamaha RM-TT]

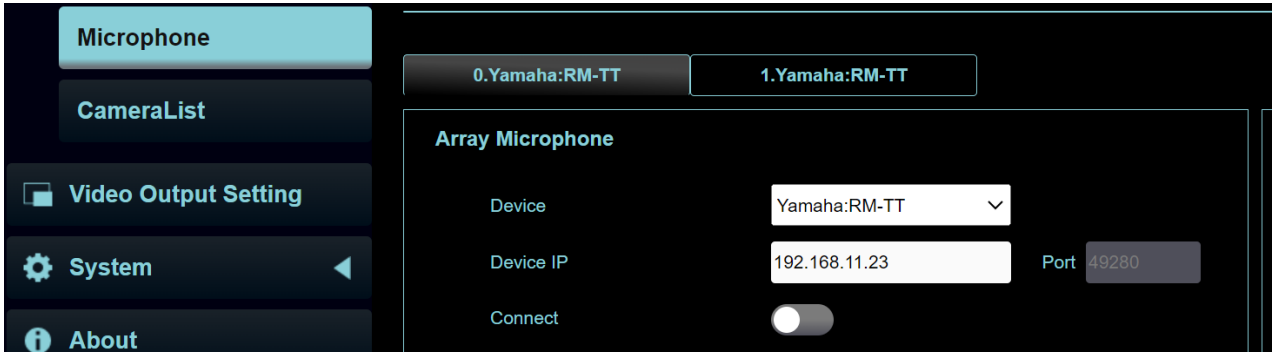

Lumens®
Copyright © Lumens. All rights reserved.

3. Enter the IP address of the Yamaha RM-TT
4. Set Audio Trigger Level to 50dB
5. Slide the [Connect] button to link the Yamaha RM-TT

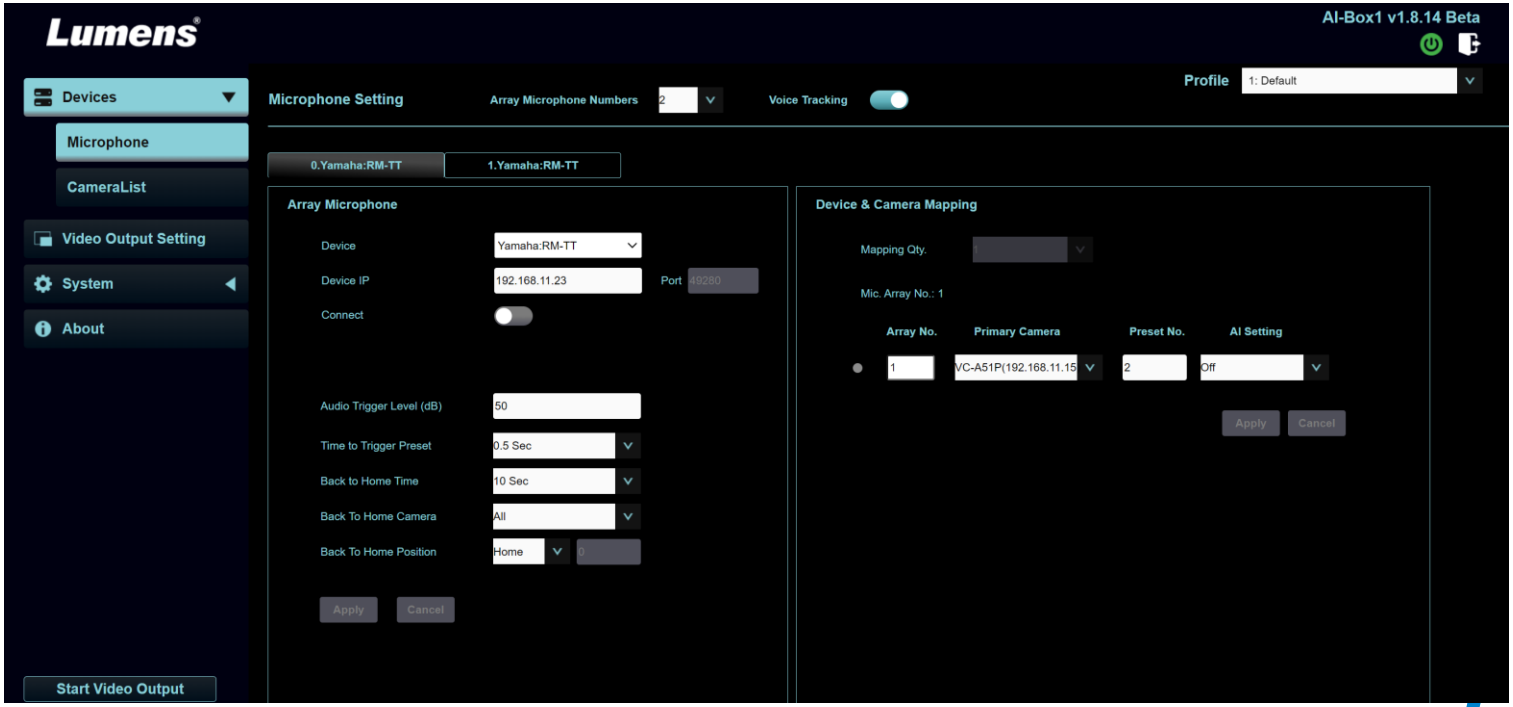

Lumens®
Copyright © Lumens. All rights reserved.

Lumens®
Your Reliable Partner

Thank You!

MyLumens.com

Contact Lumens