


**Quick Reference Guide –
Using a Lumens™ Document Camera
with
RM Easiteach**

Date:2013/02/18

Table of Contents


1	System Diagram	2
2	Connecting the Cables.....	2
3	Software Installation.....	3
4	How to Get a Live Video Feed	3
4.1	Use [Glass Mode] Function.....	3
5	How to Record Video	5

1 System Diagram

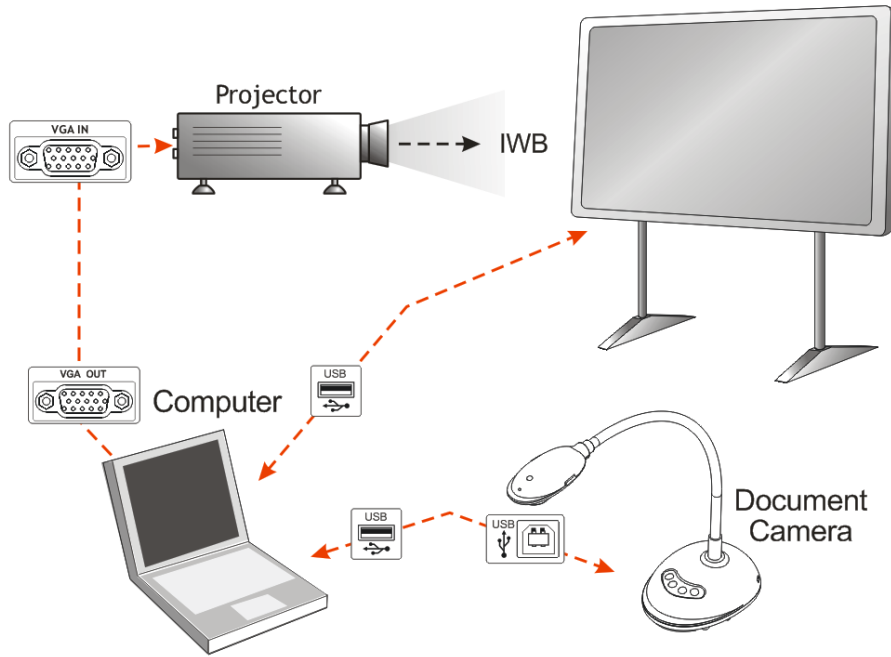


2 Connecting the cables


2.1 Connect the USB cable of the **IWB** (Interactive White Board) to the USB port on the computer.

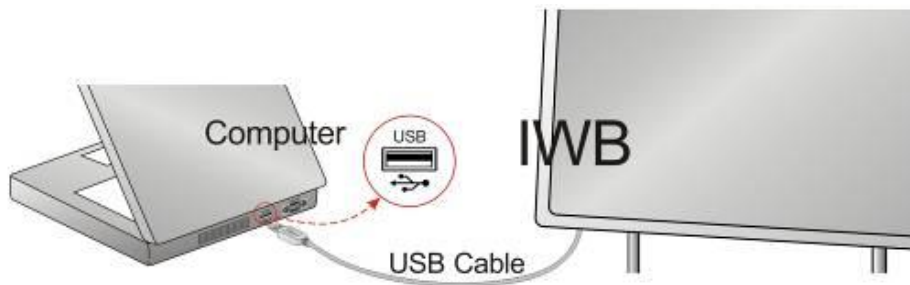

2.2 Connect the other end of the USB cable to the USB port on the computer.

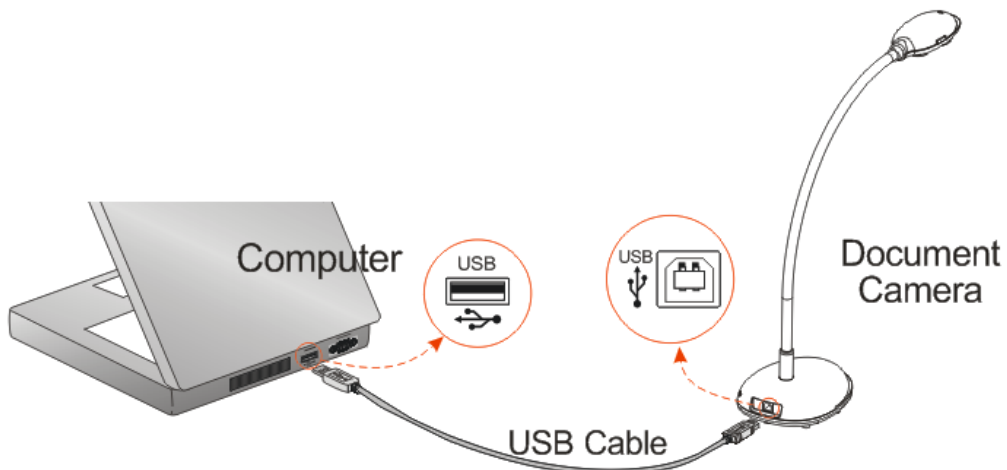

- 2.3 Connect the VGA cable to the VGA OUT port on the computer and the VGA IN port on the projector.

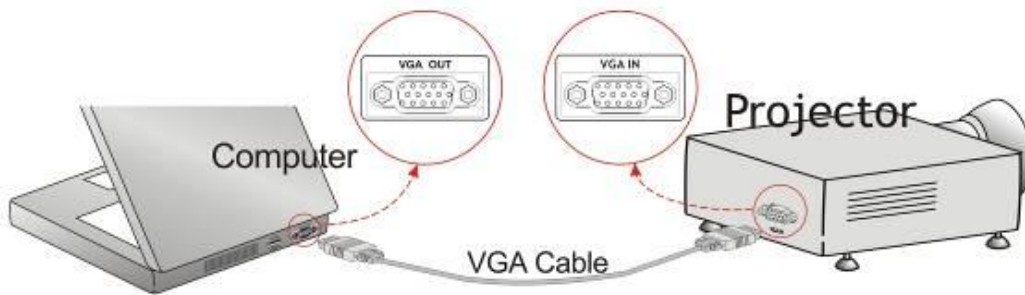


3 Software Installation

- 3.1 Download and install the latest version of **[RM Easiteach]** software from the following URL : <http://www.easiteach.com/worldwide.htm>
- 3.2 Download and install the **Ladibug™** software (for Windows) and driver from the following URL: <http://www.Mylumens.com/goto.htm>
(For more information, refer to the [Installation Manual.](#))


4 How to get a live video feed

4.1 Use [Glass Mode] Function


- 4.1.1 Launch the **[Ladibug™]** application to see a live video feed from the document camera.
- 4.1.2 With RM, press **[View modes] / [Glass mode]** to go to glass mode.

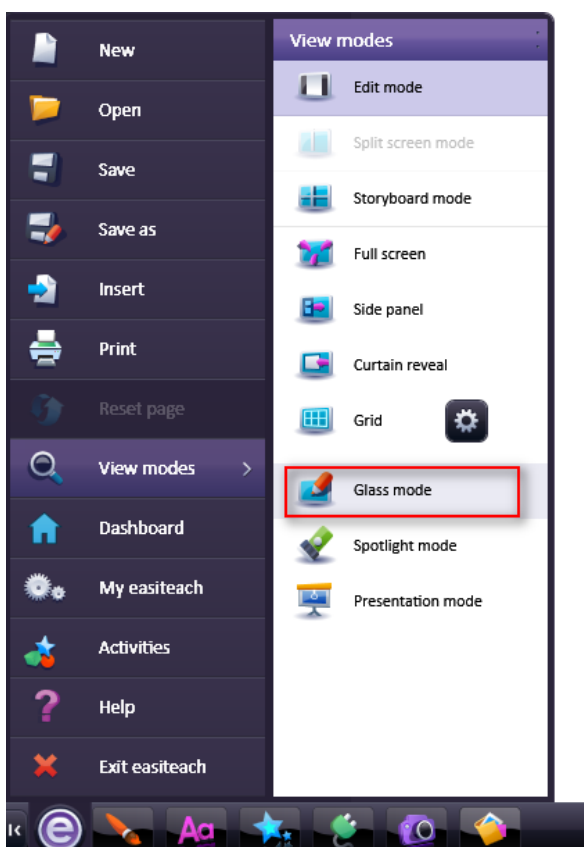


4.1.3 If desired, use the annotation tools of [RM Easiteach]

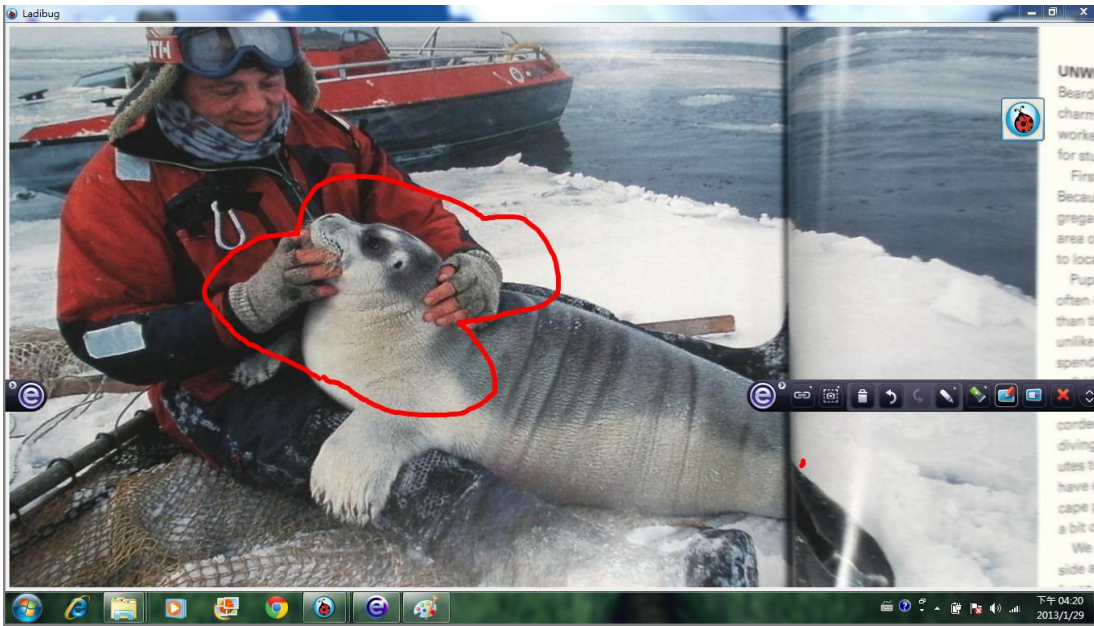


4.1.4 Then, you can use the [Screen Capture] tool of [RM Easiteach]


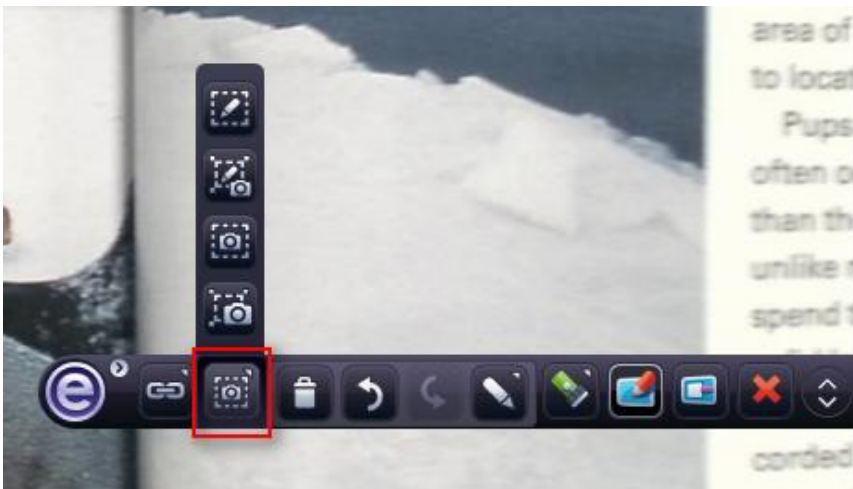


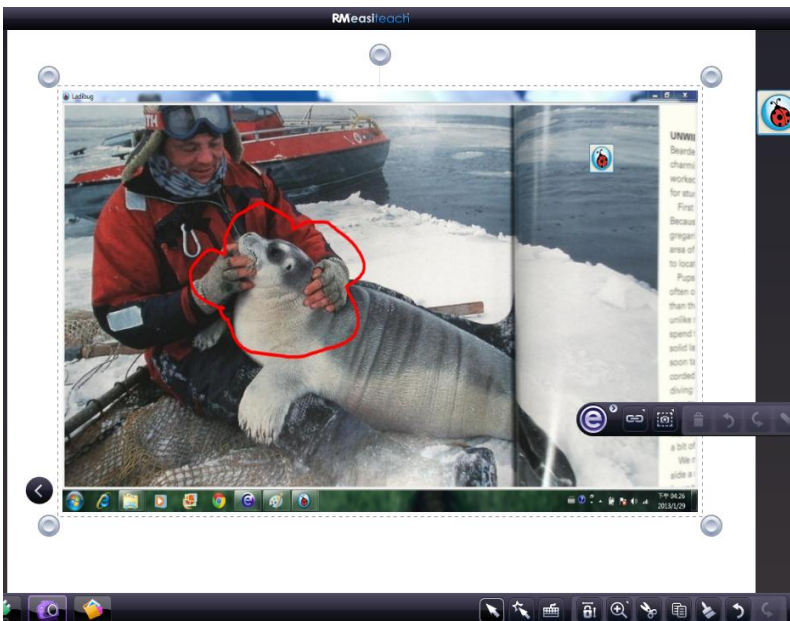

4.1.5 Do the screen capture and paste the screen to the edit page.



5 How to Record Video

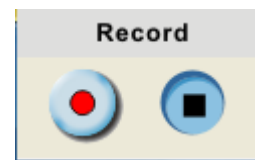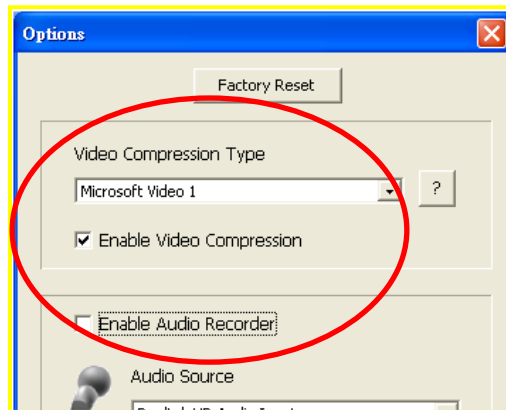- 5.1 Press  in [**Ladibug™**]
- 5.2 Select the desired video format.
- 5.3 Check the [**Enable Video Compress**] box.
- 5.4 Check the [**Enable Audio Recorder**] box.



- 5.5 Press  to open the [**video record tool bar**]
- 5.6 Press the [**Record**] radio button; the Save As window will then appear.
- 5.7 When finished, press [**Stop**] to end recording.
- 5.8 Press  to close the record toolbar.