

queueTM

(V 4.X)

(for Visual Present V2)

(for MAC)

**Visual Presenter Image Software
User Manual**

Date: 2009/07/02

Contents

1. Introduction	2
2. System requirement.....	2
3. Install.....	2
4. Start to use queue™	8
5. Operation	9
5.1 Main Menu	9
5.2 Annotation Tools	10
5.3 Camera Settings	10
5.4 Options.....	11
5.5 Time Lapse	11
6. Descriptions of Functions	12
6.1 Start the Visual Presenter	12
6.2 I would like to capture images	12
6.3 I would like to display the live image.....	12
6.4 I would like to freeze the live image	12
6.5 I would like to annotate the displayed image	12
6.6 I would like to add textual annotation to images	13
6.7 I would like to record video	15

1.Introduction

queue PC and USB driver which support WIA and TWAIN standards.

After installing the USB driver and queue application, you can use the software to to:

- Control the Visual Presenter.
- Capture and record images.
- Annotate images, highlight important details and save them for later use.

2.System requirement


- MAC OS X v10.4.10, v10.5, v10.6, v10.7, v10.8
- CPU: PowerPC G4 866MHz or Intel Pentium® 1.83GHz Intel Core 2 Duo processor
- Memory: 512MB
- 1,024x768 screen resolution and 24-bit color display
- Minimum Hard Disc Space Required: 1GB
- QuickTime 7.4.5 above

3.Install




<Very Important> To ensure successful installation, please make sure each of the following steps is completed.

- 3.1. Connect the power cord of the Visual Presenter.
- 3.2. Turn on the Visual Presenter.
- 3.3. Connect USB cable to the Visual Presenter and your computer.

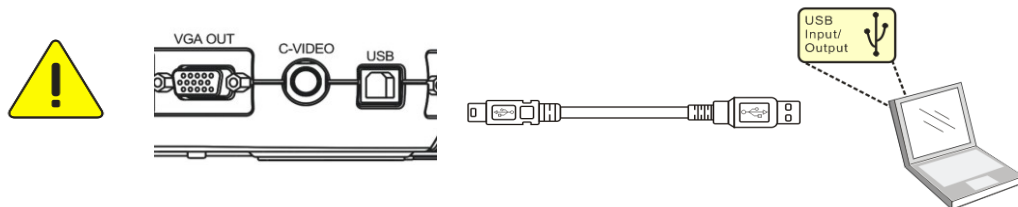


3.4. Disabling Gatekeeper : The Gatekeeper must be disable at the beginning of the installation.


3.4.1. Select the setting of **[System Preferences]** in the Apple Menu.

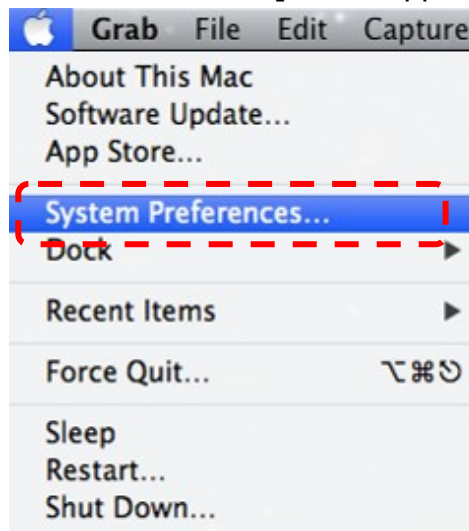

3.4.2. Click **[Security & Privacy]**.

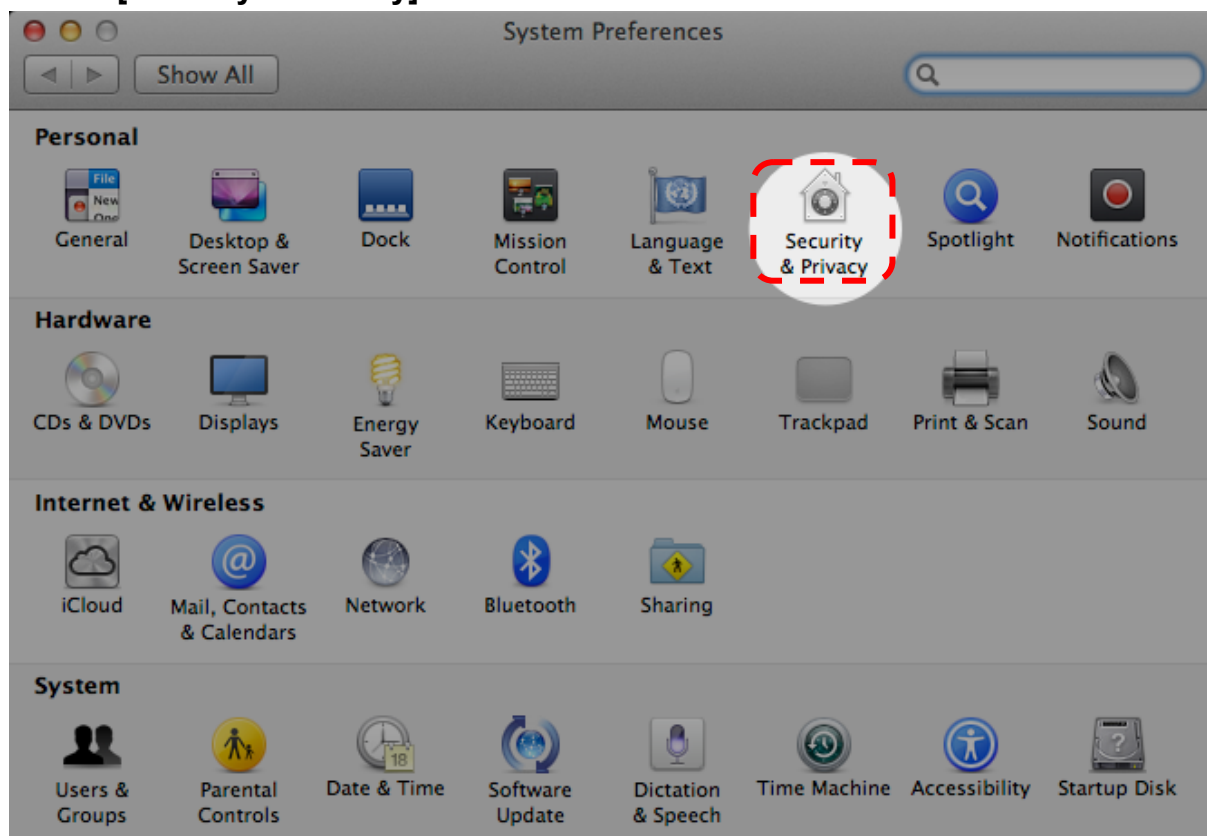


3.4.3. In the Security & Privacy pane, click on the Lock icon

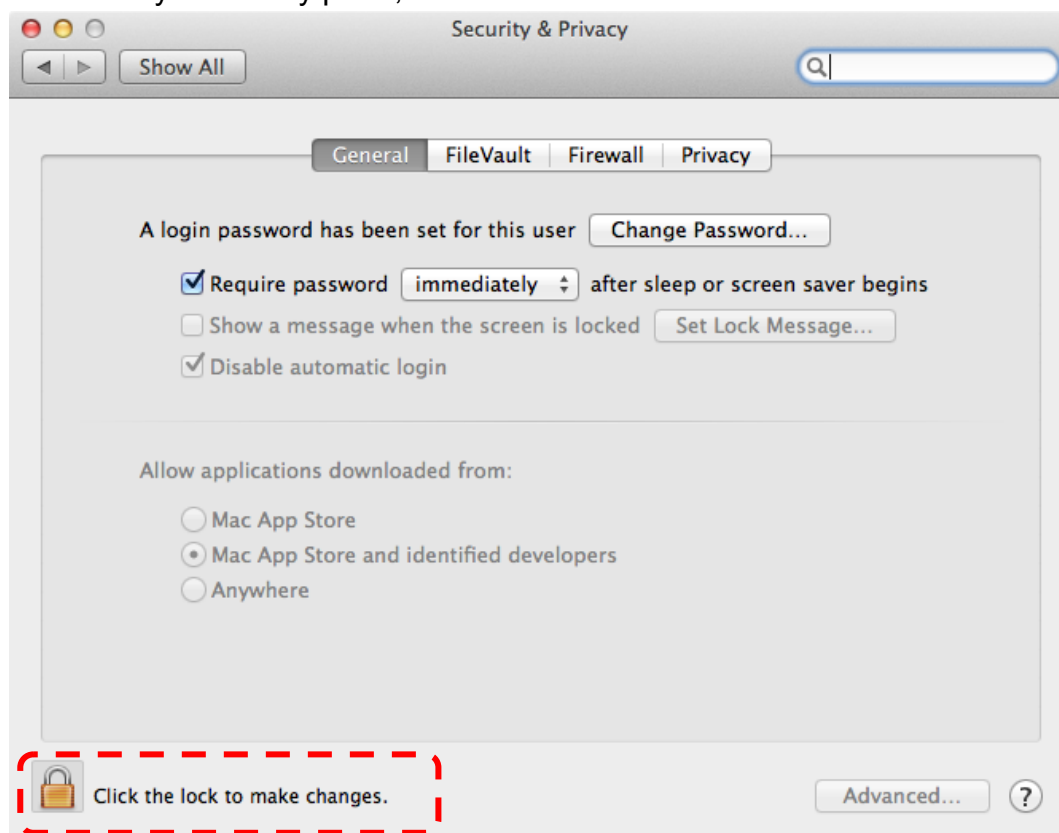


3.4.4. Enter the administrator's username and password and click **[Unlock]**



3.4.5. Click the radio button next to **[Anywhere]**.

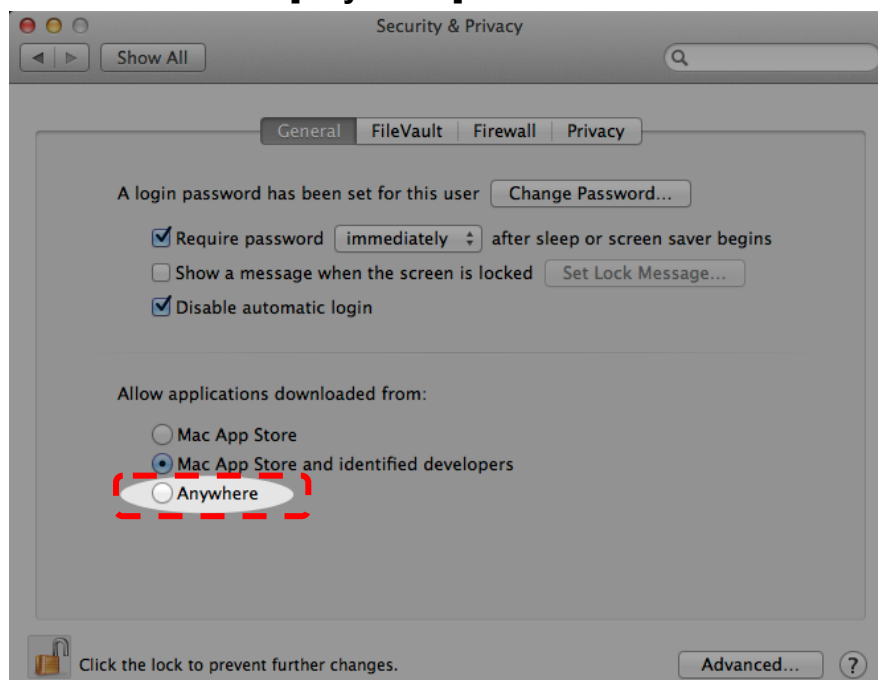


3.4.6. When prompted, click **[Allow From Anywhere]**. You can now install any compatible application on your Mac without the installation being blocked.

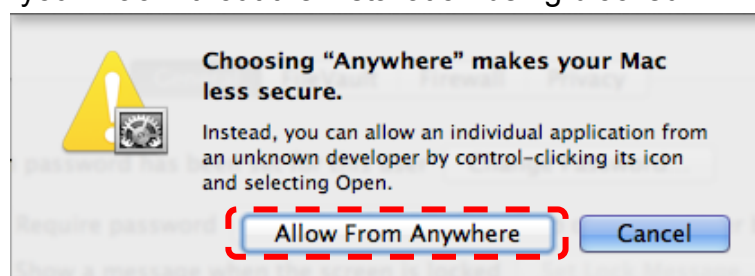


3.5. Go to Lumens™ website <http://www.Mylumens.com/goto.htm> and select the model you have purchased.

3.6. Find the [**queue 4.0+ Driver**] and press  to download.


3.7. After finding [**queue_4 install**], double-click it to start the Installation Wizard.

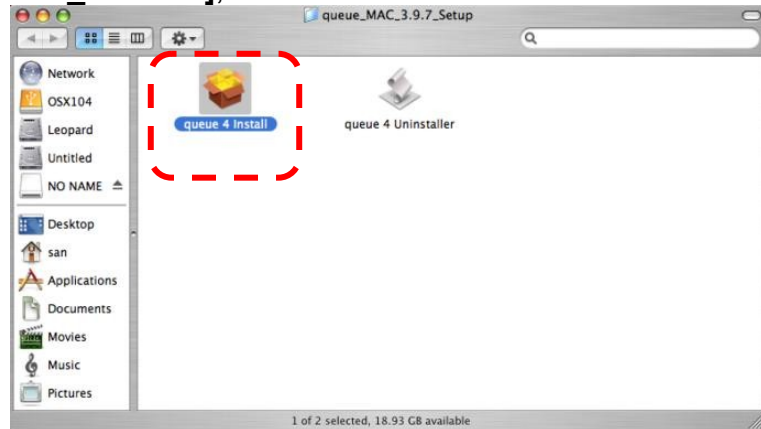


3.8. Click [**Continue**].

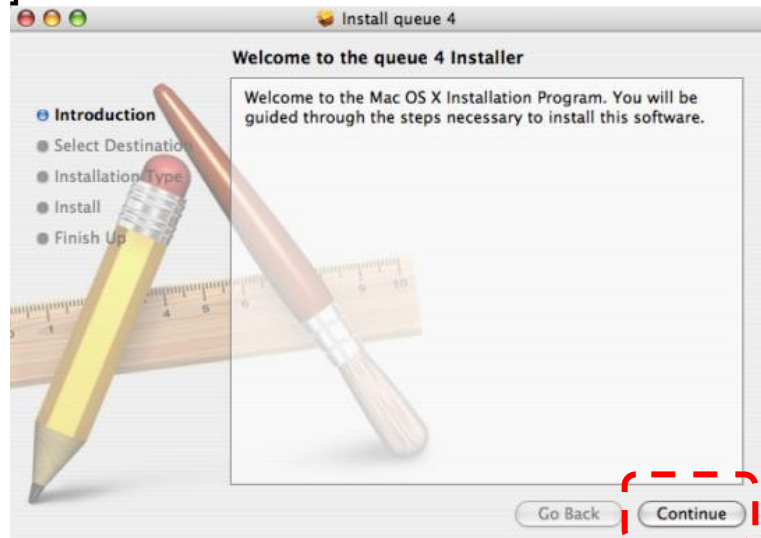

3.9. Click [**Continue**].

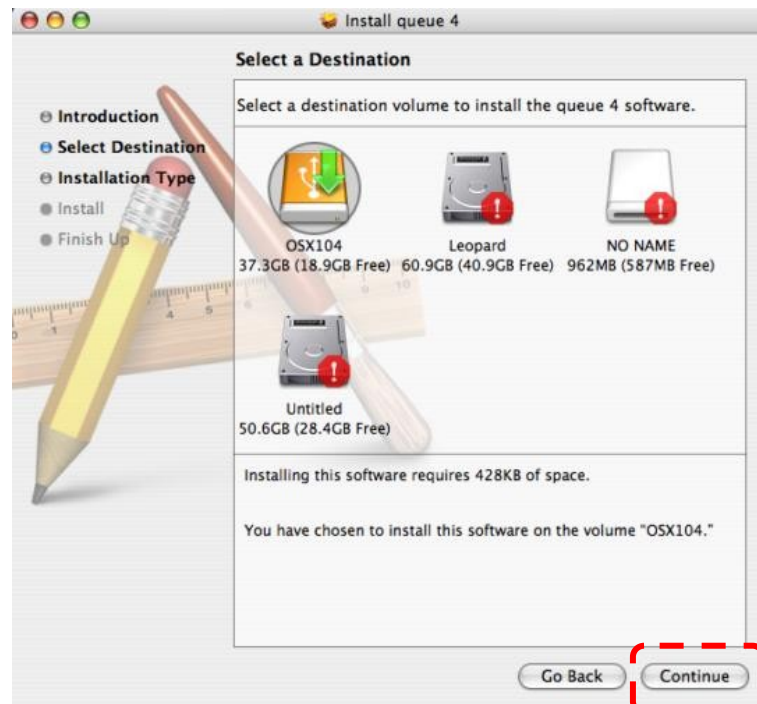


3.10. Click **[Upgrade]**.

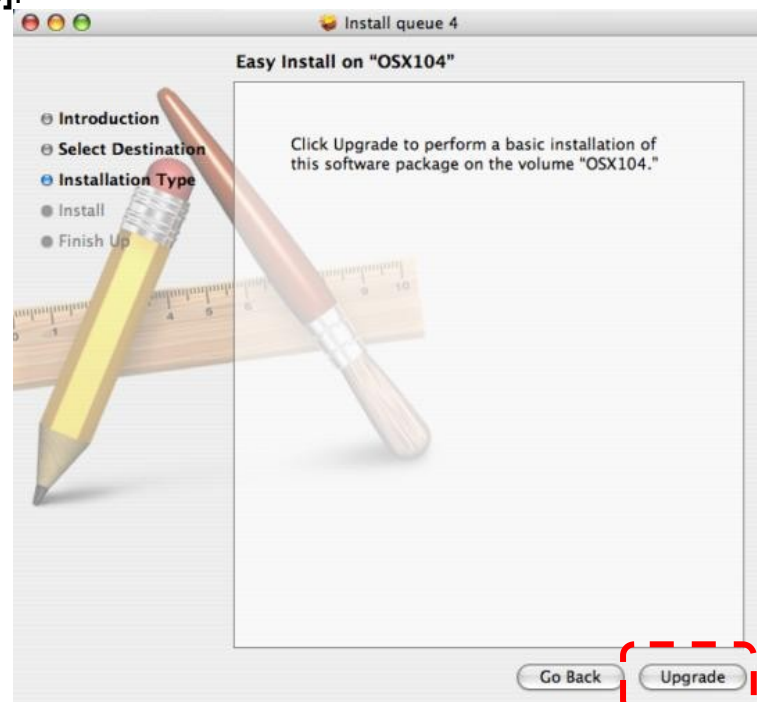


3.11. Key in the name and password then click **[OK]**.



3.12. Click **[Continue]**.

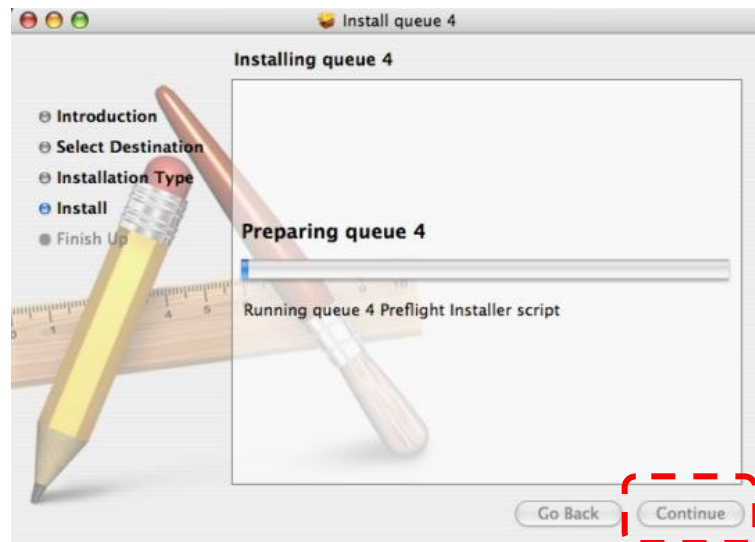


3.13. Click **[Restart]** to finish installing the software.

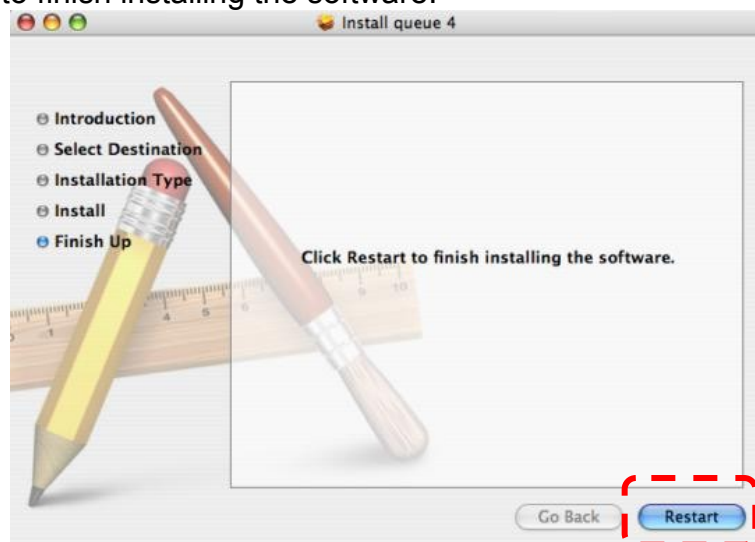


4. Start to use queue™

4.1. Select [Go] / [Applications].

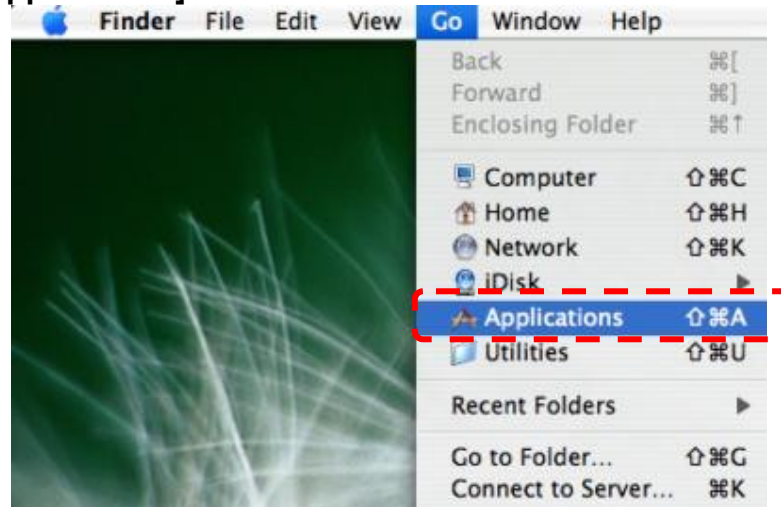

4.2. Click [queue].

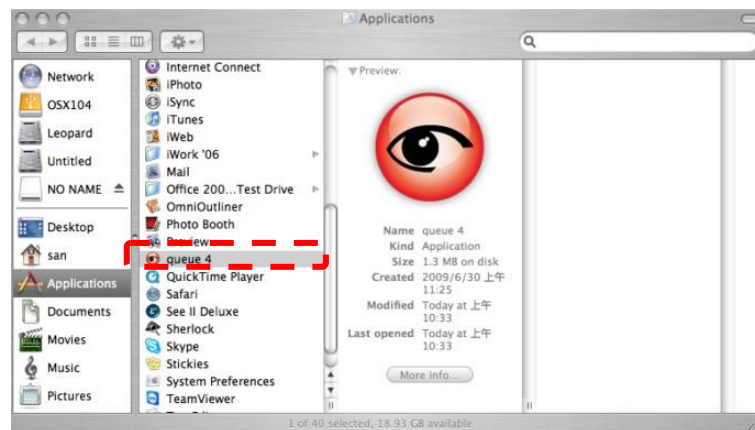

















4.3. Click the queue™ icon to launch main functions menu



5. Operation

5.1 Main Menu



	POWER: Turn the visual presenter on / off		LAMP: Turn the lamp on / off
	AUTO TUNE: Automatically adjust the image for best possible quality.		PREVIEW: Display live images
	OPTIONS: Select video compression method and the audio source.		BRIGHTNESS: Adjust image brightness
	MAIN: Launch the main functions menu Right click on this icon to show information about the queue.		ZOOM: Zoom in/out from the image
	CAMERA SETTING: Launch the Camera Setting window to adjust live images		ADVANCE: Launch the advanced functions menu
	FREEZE: Freeze a live image		ANNOTATION: Display annotation tools
	CLOSE: Close the advanced functions menu		TIME LAPSE PHOTOGRAPHY: Capture images at a pre-set intervals
	RECORD: Record videos		CAPTURE: Capture still images

5.2 Annotation Tools



ICON	Description	ICON	Description	ICON	Description
	Pointer tool		Laser tool		Insert text
	Draw a line		Draw an ellipse		Draw a rectangle
	Free-hand drawing tool		Eraser		Clear all
		Line Width <input type="text" value="1"/>		Select line thickness	

5.3 Camera Settings

Control the live image via the **Camera Settings** interface. The operating procedure is the same as the **remote control** and **control panel** of the **Visual Presenter**. Refer to the [Visual Presenter user manual](#) for more information.

<Note> The display of the button may vary depending on product functions. An inactive button will grey out.




5.4 Options



- **Video Compress type** : Set the video format.
- **Enable Audio Recorder** : Enable the audio record device and set the audio source.
- **Audio Source** :Select audio source
- **Audio Compress type** : Set the audio format.

5.5 Time Lapse

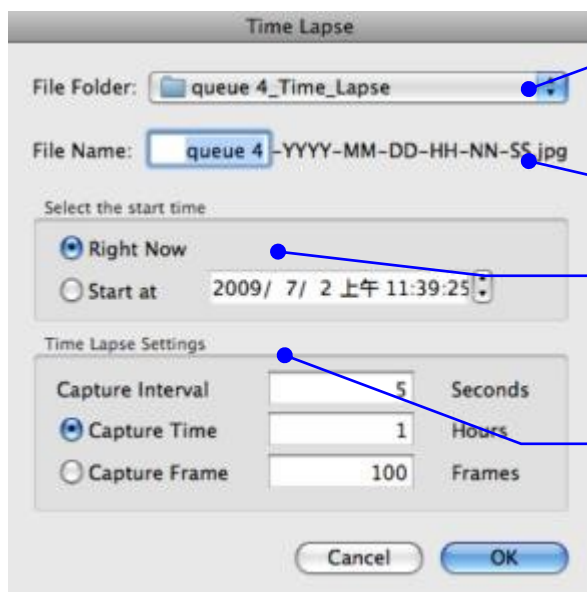

Select file directory to change the default.

Specify a file name..

Set the start time.

Capture images at a pre-set intervals .

6. Descriptions of Functions

6.1 Start the Visual Presenter

8.1.1 Click




6.2 I would like to capture images

<NOTE> You can click  to change time lapse setting before capture images, more details please refer to [7.5 Time Lapse](#).

8.2.1 Click



then a Save As window will be displayed.

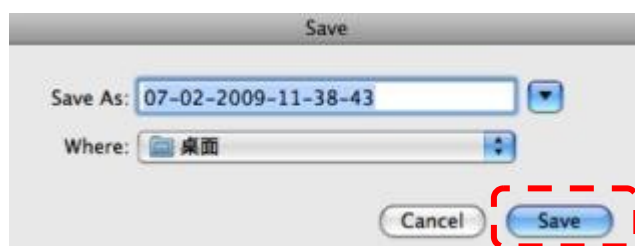

8.2.2 Key in the file name then click **[Save]**.

6.3 I would like to display the live image

8.3.1 Click



to display the live image.

6.4 I would like to freeze the live image

8.4.1 Click



to freeze the live image of queue™.


6.5 I would like to annotate the displayed image

8.5.1 Click



to open the annotation tools.

8.5.2 The default mode is **[Pointer Tool]**. You can select another annotation tool.

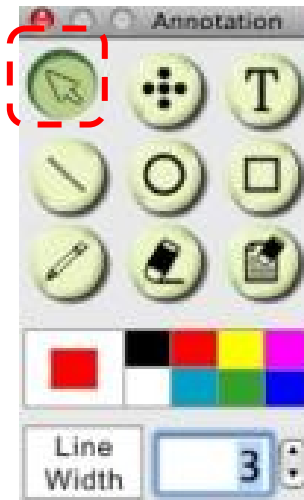

8.5.3 Select a color for drawing.



8.5.4 Set the value of Line width (If the value is higher, the line is thicker).



8.5.5 Mark or annotate the displayed image.




<Remark> You can Click to capture images that you draw.

6.6 I would like to add textual annotation to images




8.6.1 Click to open the annotation tools.

8.6.2 Select **[Text Tool]**.

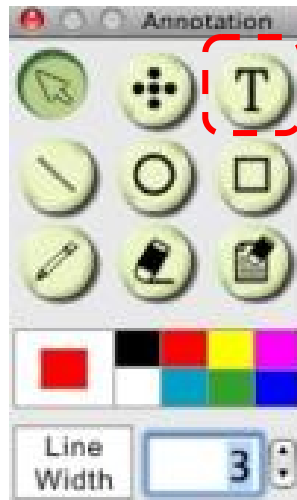

8.6.3 The **[Text Tool]** window will pop up when you click the screen for the text to be added in.

8.6.4 Enter the text in blank fields and click **[OK]**.

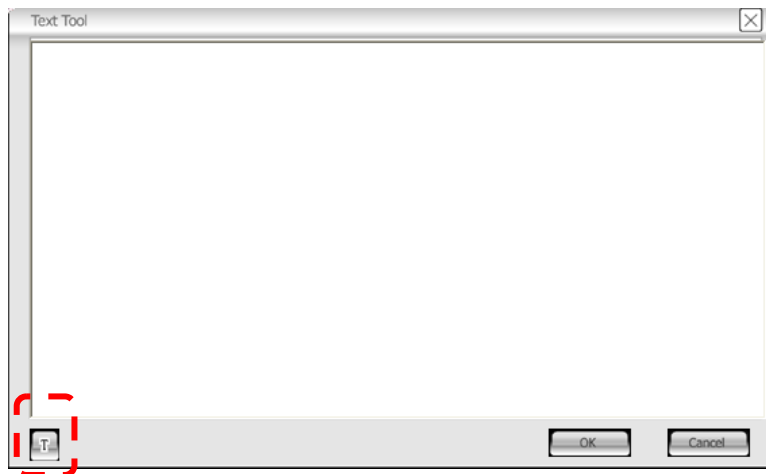

8.6.5 Click **[T]** to change font's settings (size/color/effect).


<Remark> You can Click



to capture images that you draw.

6.7 I would like to record video


<NOTE> You can click  to change video format and audio source setting before recording, more details please refer to [7.4 Options](#).

8.7.1 Click  to open the video tool.


8.7.2 Click **[Record]** then a window will be displayed.




8.7.3 Key in the file name then click **[Save]** to start recording. <insert image>

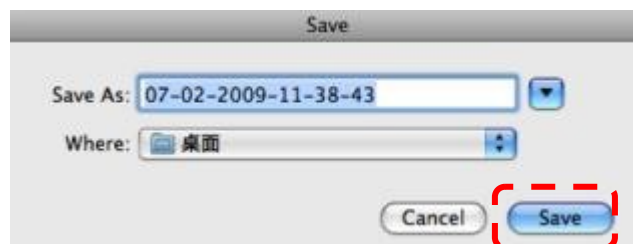

8.7.4 Click **[Stop]** to stop recording.

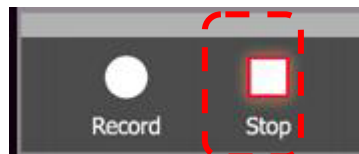

8.7.5 Click  to close the record tool.